



# Lavino Wall Washer

## Canopy 250 Installation Instruction


OPTIQUE

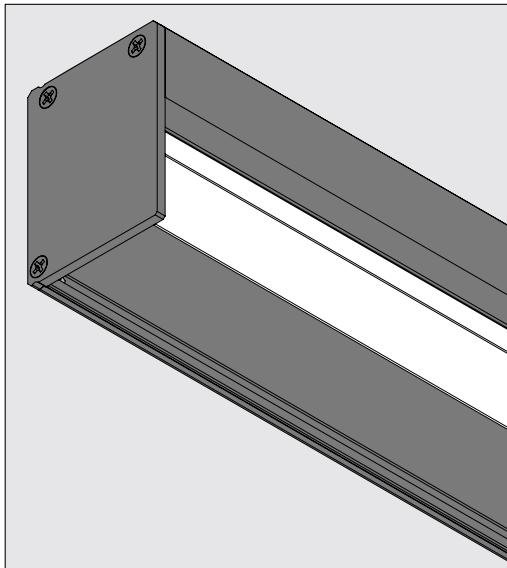

### Required Tools

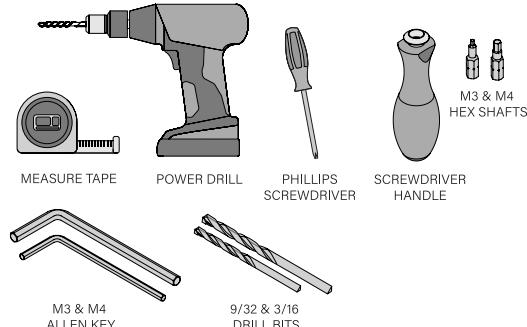

### Supplied Components

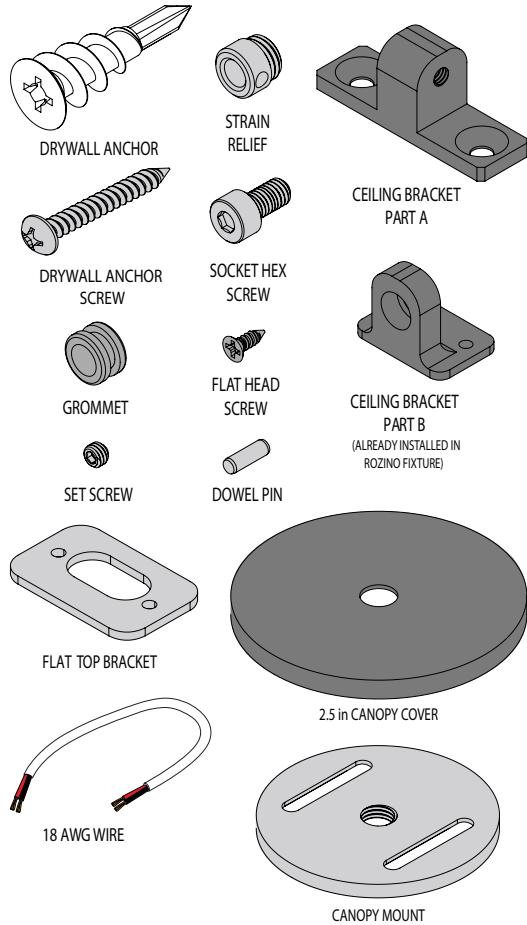

### Important Information

1. This product requires a 24V DC Class 2 power supply.
2. This product is intended to be mounted on the ceiling.
3. There are two ways to power the fixture as follows:
  - Option A: Side Power Install
  - Option B: Top Power Install
4. Optique recommends drilling fixture supports into joists in the ceiling. If joists aren't available, please use supplied drywall anchors. (The following instructions depict the installation using drywall anchors.)



(844) 454-2910



solutions@optique-lighting.com



optique-lighting.com

# Lavino Wall Washer

## Canopy 250 Installation Instruction

OPTIQUE

### Option A: Side Power Install Section One.

#### 1.1.A

Position the 24V DC Class 2 power supply in a suitable location within 30 feet of the desired fixture location.


NOTE: Longer distances are acceptable when using thicker 12 AWG wire.

#### 1.2.A

Using a pencil, mark a line where you would like to mount Lavino. Recommended distance is 15 inches from the wall to be washed.


#### 1.3.A

Position the ceiling bracket over the line, then mark the center holes with a pencil.

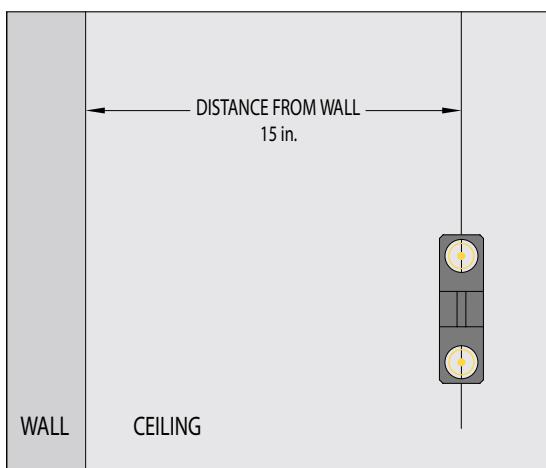

#### 1.4.A


Drill a hole with a 3/16 in. drill bit at the marked spots. Tap the drywall anchors in the hole until it is flush with the ceiling using a hammer.

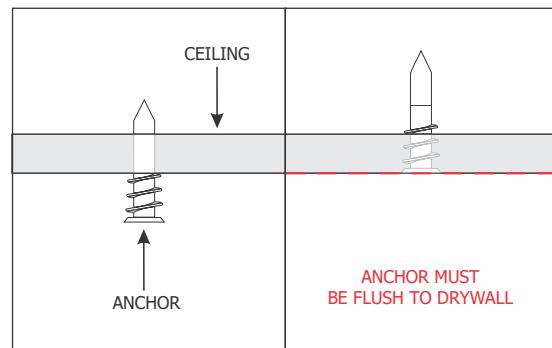

#### 1.5.A

Align the holes in the bracket with the installed anchors. Use a screwdriver or drill to drive the screws until it is tight.

NOTE: Use one ceiling bracket for every two feet.

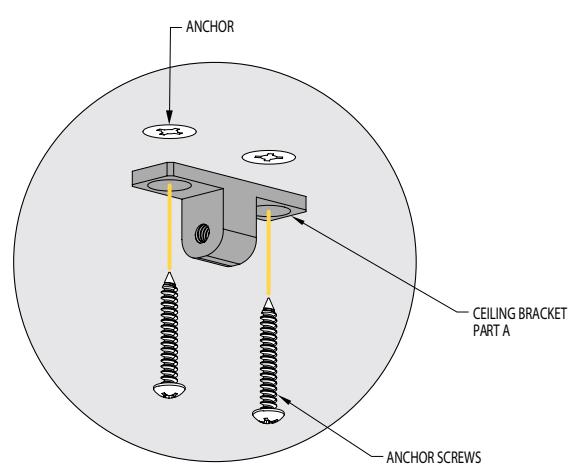

# Lavino Wall Washer


## Canopy 250 Installation Instruction

OPTIQUE

### 1.6.A


Mark a line 1.5 to 2 inches from the ceiling bracket. Drill a slot large enough to pass the wire connectors.

- Run a 24V low-voltage wire through the hole in the ceiling.

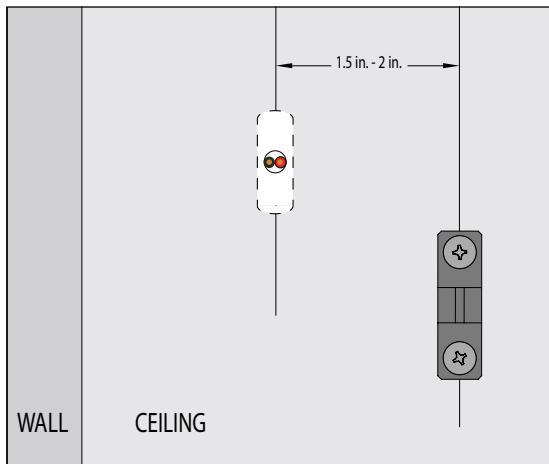


### 1.7.A

Align the brackets that come with the Lavino fixture to the distances of the ceiling brackets previously installed.

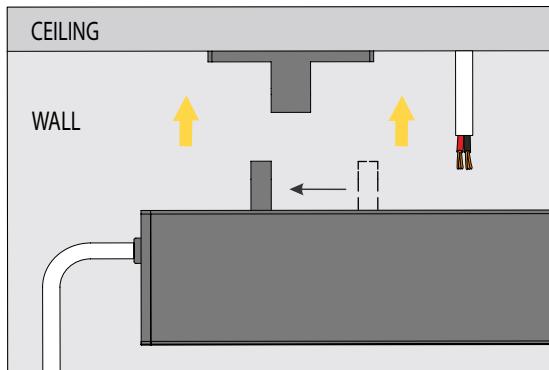

### 1.8.A


Tighten the set screws of the brackets placed on the Lavino clockwise to hold in place.

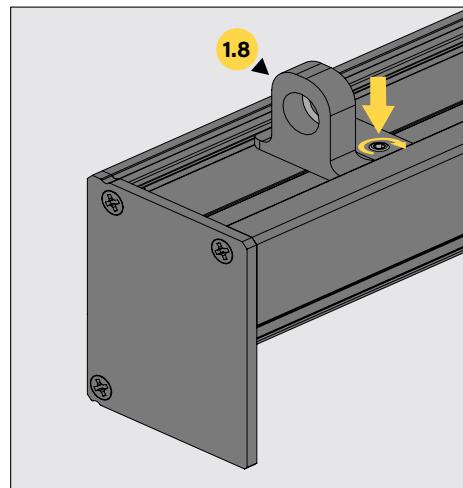

NOTE: Use one ceiling bracket for every two feet.

### 1.9.A

Position Lavino aligning the ceiling brackets. Screw the socket hex screw to secure the fixture in place.

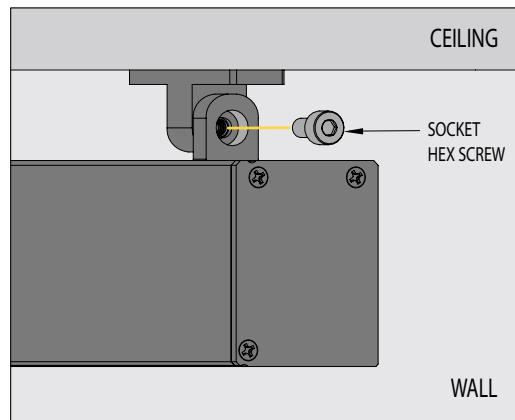

(844) 454-2910



solutions@optique-lighting.com



optique-lighting.com

# Lavino Wall Washer


## Canopy 250 Installation Instruction

OPTIQUE

### Option A: Side Power Install Section Two


#### 2.1.A

Align the canopy mount center over drilled slot and make another mark in the center of the slots for the next drilling step.

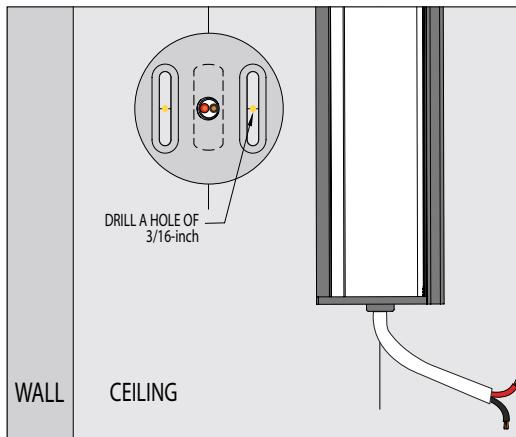


#### 2.2.A

Drill a hole with a 3/16 in. drill bit at the marked spots. Tap the drywall anchors in the hole until it is flush with the ceiling using a hammer.

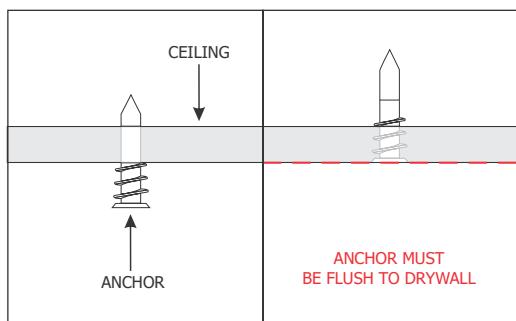

#### 2.3.A

Pre-thread the wire from the Lavino through the strain relief, canopy cover, and through the canopy mount.

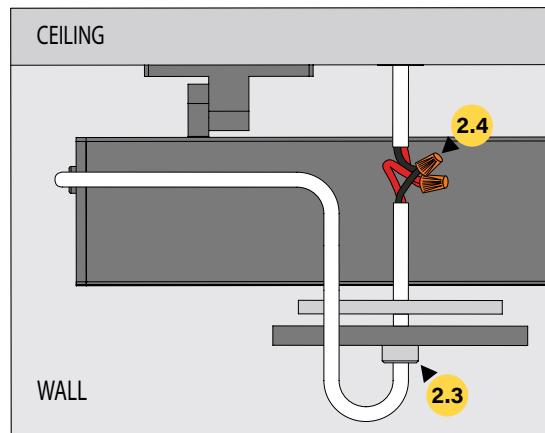

#### 2.4.A

Connect the 24V low-voltage wire to the wire lead from the Lavino. Red is positive (+) and black is negative (-).


- Pass connected low-voltage wires through the drilled hole in the ceiling.

#### 2.5.A

Align the slots in the canopy mount with the installed anchors. Use the drywall anchor screws to secure the canopy mount to the ceiling.



# Lavino Wall Washer

## Canopy 250 Installation Instruction

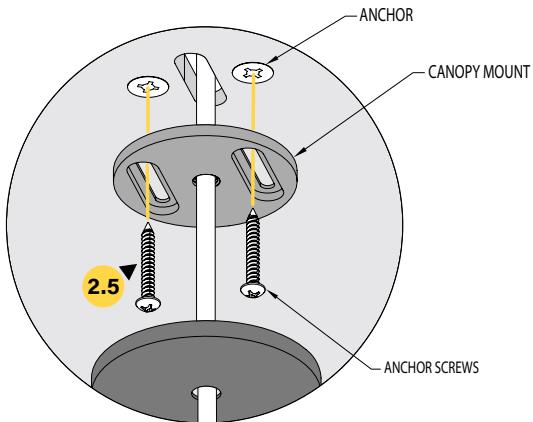


### 2.6.A

Secure the 2.5 in. canopy cover with the strain relief in the threaded hole.

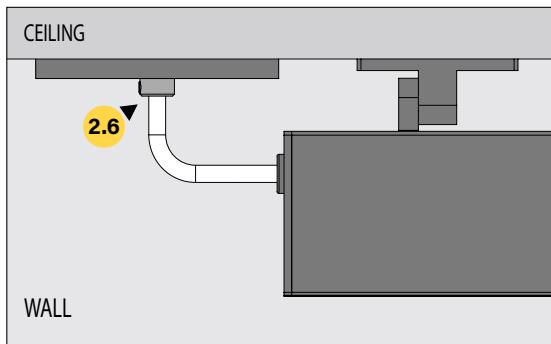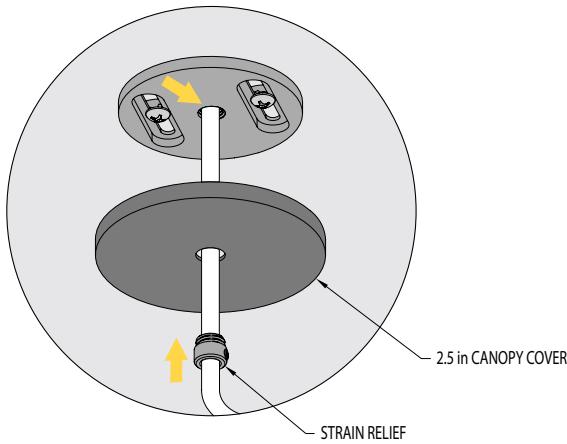


### 2.7.A

Route the wire through the canopy and tighten the set screw in the strain relief clockwise.

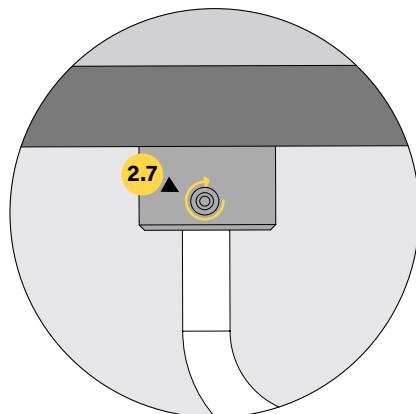

### 2.8.A

Affix fixture cover to Lavino by gently snapping into place.

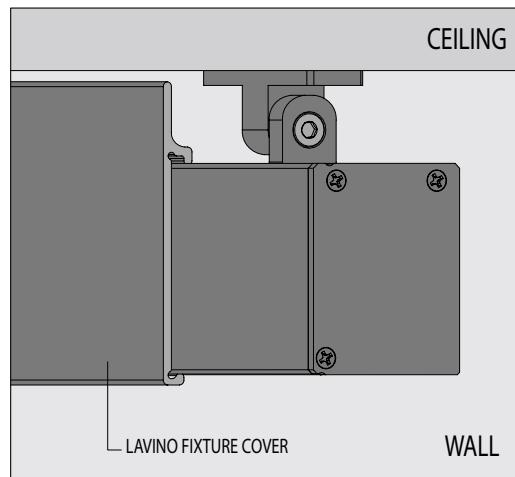

# Lavino Wall Washer



## Canopy 250 Installation Instruction

OPTIQUE

### 2.9.A

Tilt Lavino to desired angle and tighten the socket hex screw.

NOTE: Recommendable tilt between 2 - 5 degrees.

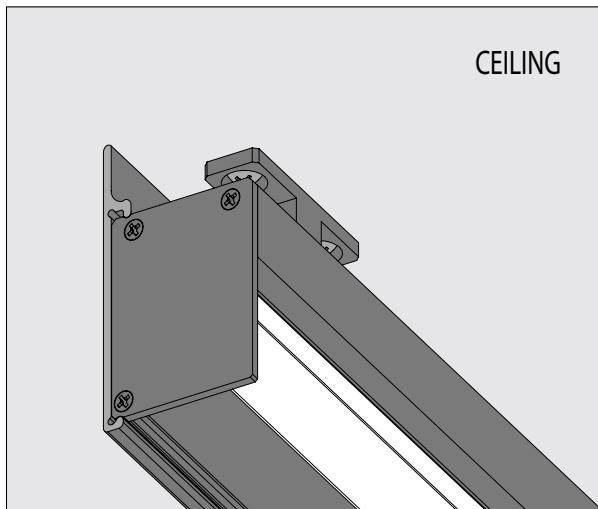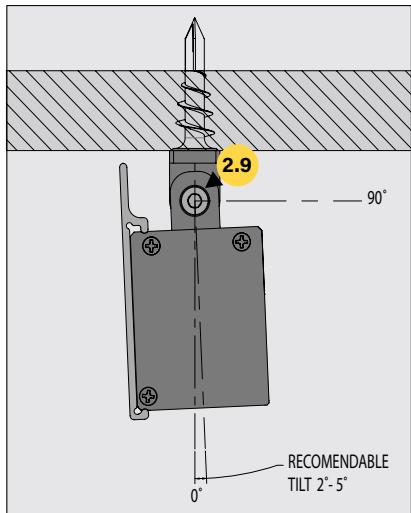

INSTALLATION COMPLETED



(844) 454-2910



solutions@optique-lighting.com



optique-lighting.com

# Lavino Wall Washer

## Canopy 250 Installation Instruction

OPTIQUE

### Option B: Top Power Install Section One.

#### 1.1.B

Position the 24V DC Class 2 power supply in a suitable location within 30 feet of the desired fixture location.


NOTE: Longer distances are acceptable when using thicker 12 AWG wire.

#### 1.2.B

Using a pencil, mark a line where you would like to mount Lavino. Recommended distance is 15 inches from the wall to be washed.


#### 1.3.B

Position the ceiling bracket over the line, then mark the center holes with a pencil.

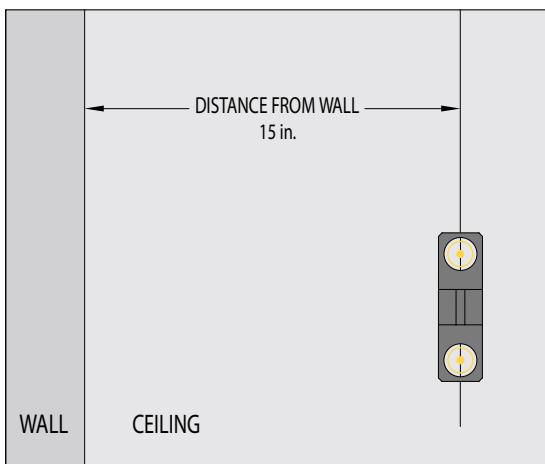

#### 1.4.B


Drill a hole with a 3/16 in. drill bit at the marked spots. Tap the drywall anchors in the hole until it is flush with the ceiling using a hammer.

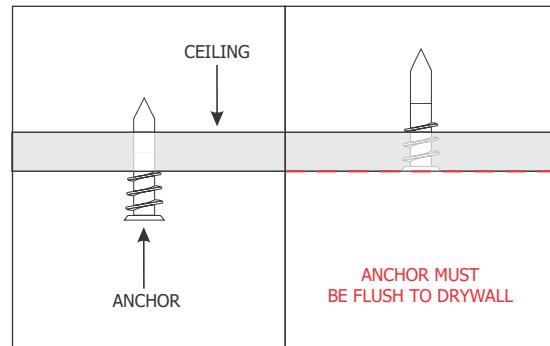

#### 1.5.B

Align the holes in the bracket with the installed anchors. Use a screwdriver or drill to drive the screws until it is tight.

NOTE: Use one ceiling bracket for every two feet.

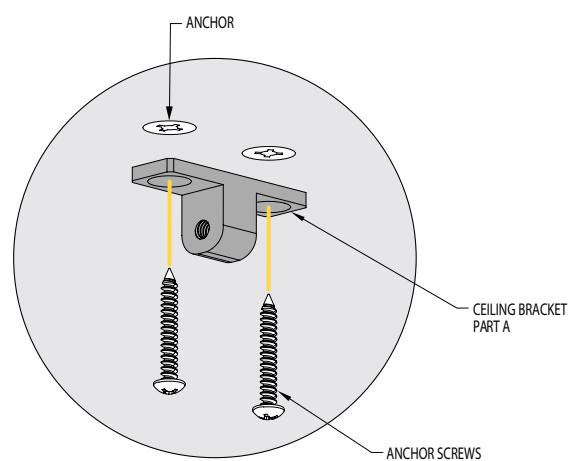


# Lavino Wall Washer

## Canopy 250 Installation Instruction

### 1.6.B


Mark a line 1.5 to 2 inches from the ceiling bracket. Drill a slot large enough to pass the wire connectors.

- Run a 24V low-voltage wire through the hole in the ceiling.

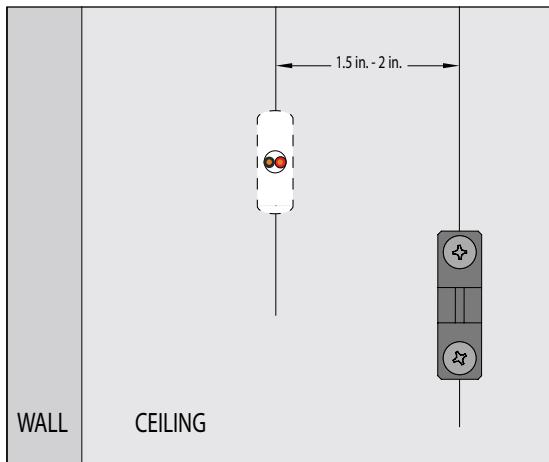


### 1.7.B

Align the brackets that come with the Lavino fixture to the distances of the ceiling brackets previously installed.

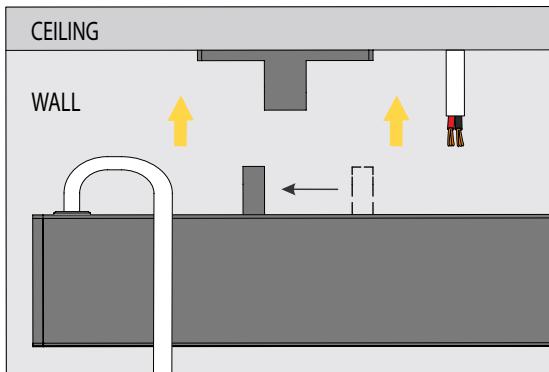

### 1.8.B


Tighten the set screws of the brackets placed on the Lavino clockwise to hold in place.

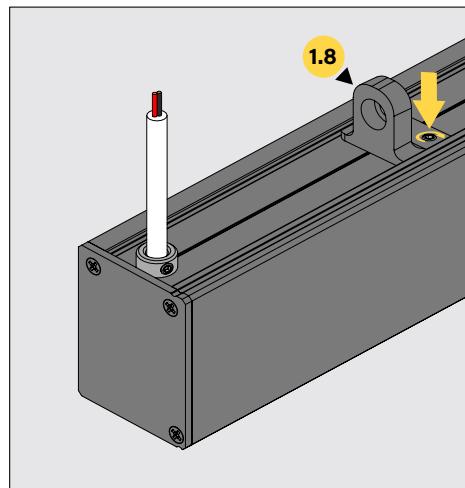

NOTE: Use one ceiling bracket for every two feet.

### 1.9.B

Position Lavino aligning the ceiling brackets. Screw the socket hex screw to secure the fixture in place.

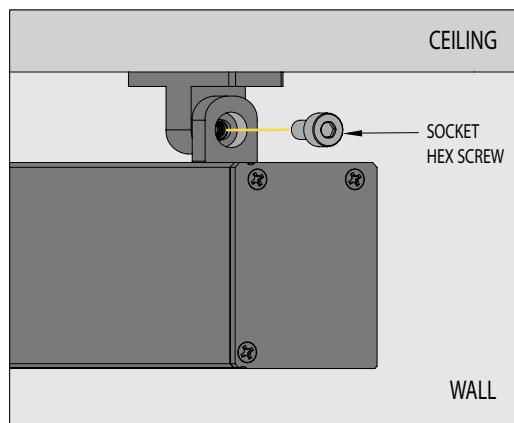

(844) 454-2910



solutions@optique-lighting.com



optique-lighting.com

# Lavino Wall Washer


## Canopy 250 Installation Instruction

OPTIQUE

### Option B: Top Power Install Section Two


#### 2.1.B

Align the canopy mount center over drilled slot and make another mark in the center of the slots for the next drilling step.

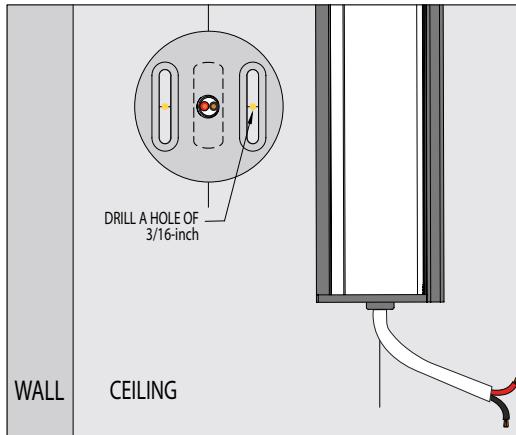


#### 2.2.B

Drill a hole with a 3/16 in. drill bit at the marked spots. Tap the drywall anchors in the hole until it is flush with the ceiling using a hammer.

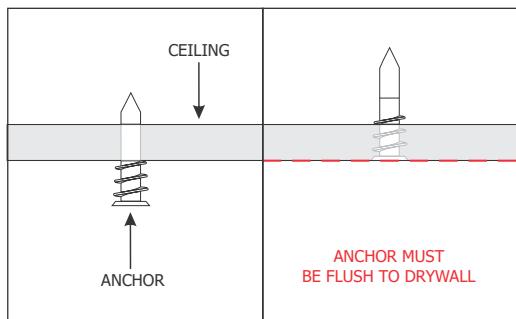

#### 2.3.B

Pre-thread the wire from the Lavino through the strain relief, canopy cover, and through the canopy mount.

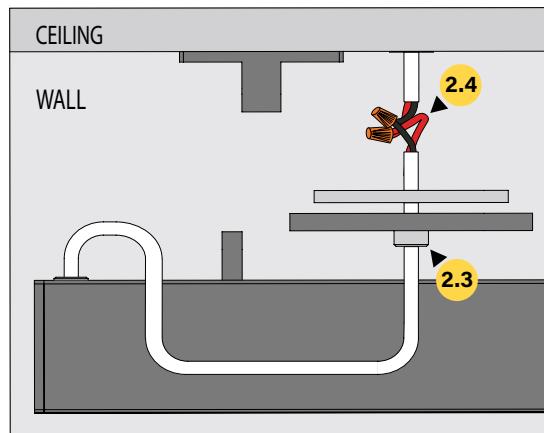

#### 2.4.B

Connect the 24V low-voltage wire to the wire lead from the Lavino. Red is positive (+) and black is negative (-).

- Pass connected low-voltage wires through the drilled hole in the ceiling.


#### 2.5.B

Align the slots in the canopy mount with the installed anchors. Use the drywall anchor screws to secure the canopy mount to the ceiling.

# Lavino Wall Washer



## Canopy 250 Installation Instruction

OPTIQUE

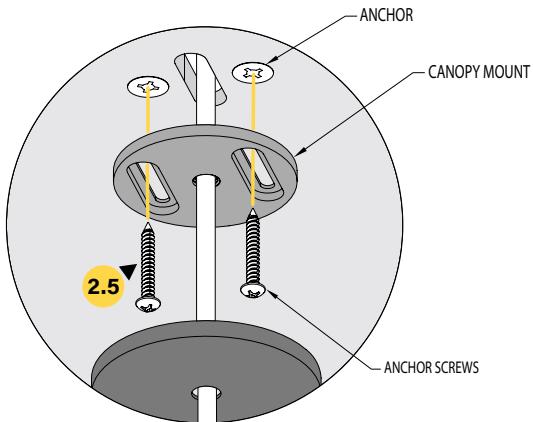


### 2.6.B

Secure the 2.5 in. canopy cover with the strain relief in the threaded hole.

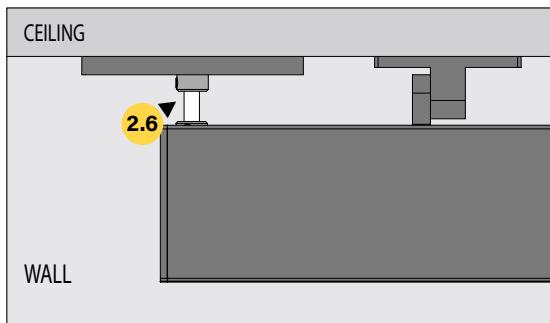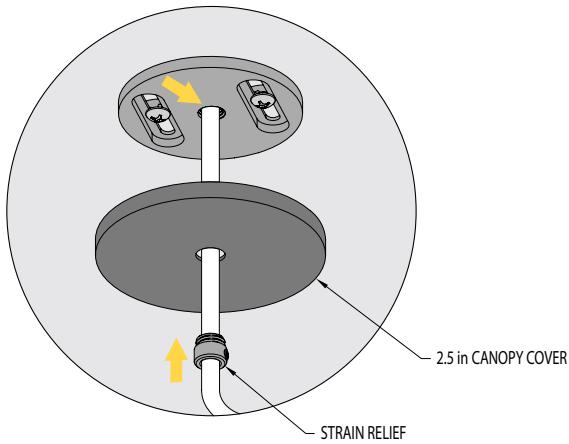


### 2.7.B

Route the wire through the canopy and tighten the set screw in the strain relief clockwise.

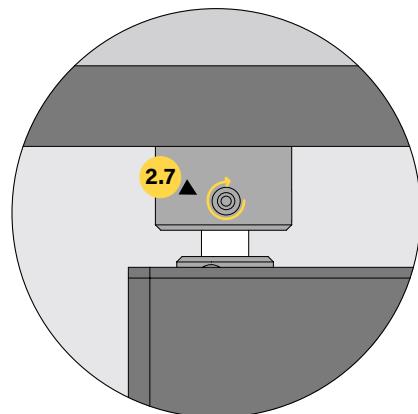

### 2.8.B

Affix fixture cover to Lavino by gently snapping into place.

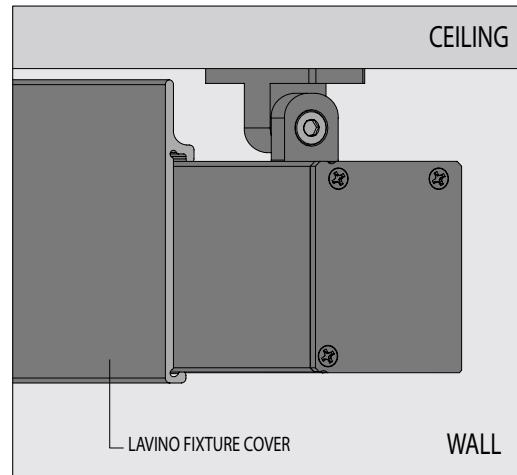

# Lavino Wall Washer



## Canopy 250 Installation Instruction

OPTIQUE

### 2.9.B

Tilt Lavino to desired angle and tighten the socket hex screw.

NOTE: Recommendable tilt between 2 - 5 degrees.

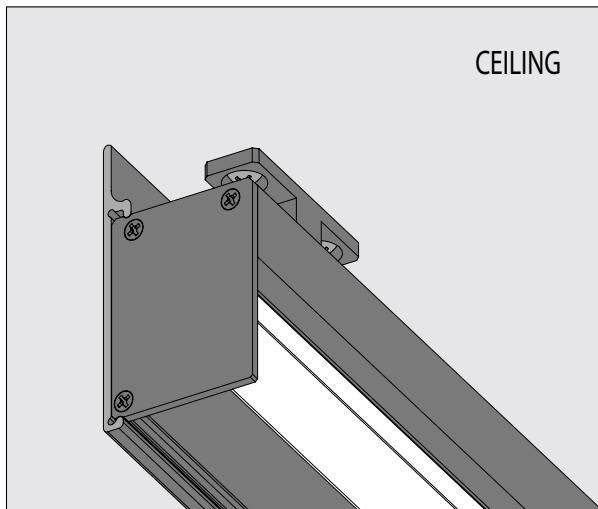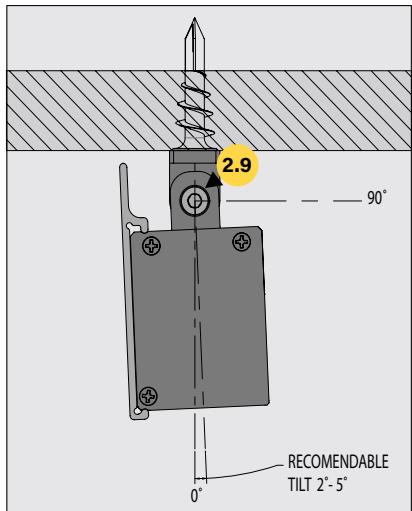

INSTALLATION COMPLETED



(844) 454-2910



solutions@optique-lighting.com



optique-lighting.com