


# Perifina Wall Accent 2 in.

Recessed Mud-In Wall Luminaire

OPTIQUE

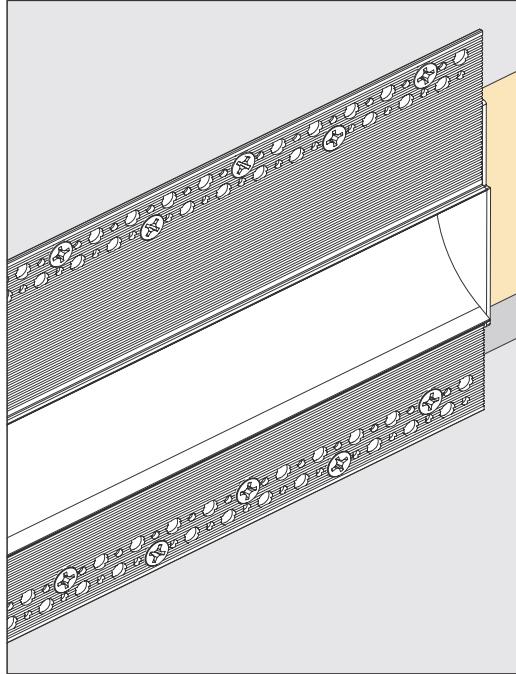

Beautifully crafted with a scoop design that creates an attractive light gradient that can easily go around corners without light gaps.

## Important Information


1. Compatible with 5/8 inch drywall.
2. This product requires a 24V DC Class 2 power supply.
3. This product can span lengths that are wall-to-wall, or be specified in shorter sections for sconce-like applications.




## Required Tools



JAB SAW

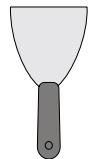

JOINT KNIFE

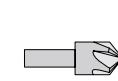


COUNTERSINK DRILL BIT



POWER DRILL



PAINTER'S TAPE

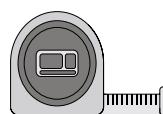


TAPE MEASURE



HAND SANDER




## Supplied Components

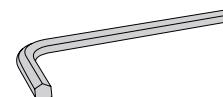

ALLEN KEY



SET SCREW

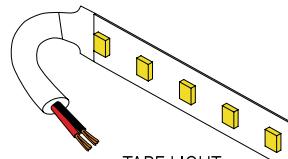

TAPE LIGHT  
WITH LEAD WIRE



FLAT HEAD  
SCREW

The following items may vary according to the configuration, and will be provided as applicable.



(844) 454-2910



solutions@optique-lighting.com



optique-lighting.com

# Perifina Wall Accent 2 in.

Recessed Mud-In Wall Luminaire


OPTIQUE

## Perifina Wall Accent Installation steps

### 01.


Position the 24V DC Class 2 power supply in a suitable location within 30 feet of the desired fixture location.

NOTE: Longer distances are acceptable when using a thicker 12 AWG wire.

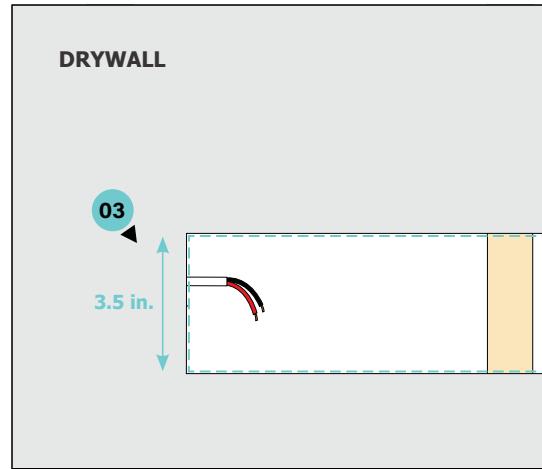

### 02.

Bring 24V low-voltage in-wall rated wires to the desired fixture location.

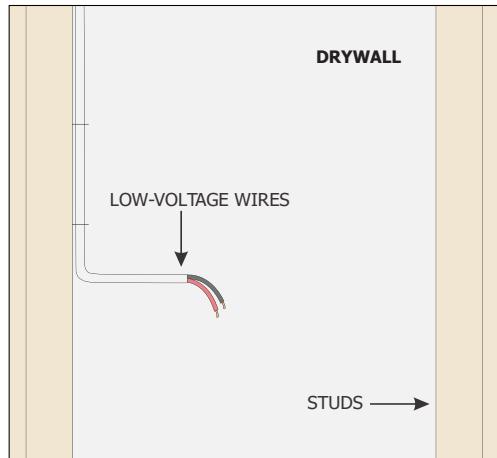

### 03.


Cut a 3.5 in. opening in the drywall where you would like to mount Perifina Wall Accent 2 in.

NOTE: Mark the location of the studs on the drywall for future reference.

### 04.

Remove the adhesive backing from the tape light and stick the tape to the inside edges of the fixture.

NOTE: For an installation with bevel corners place the tapelight as the edge lighting option.

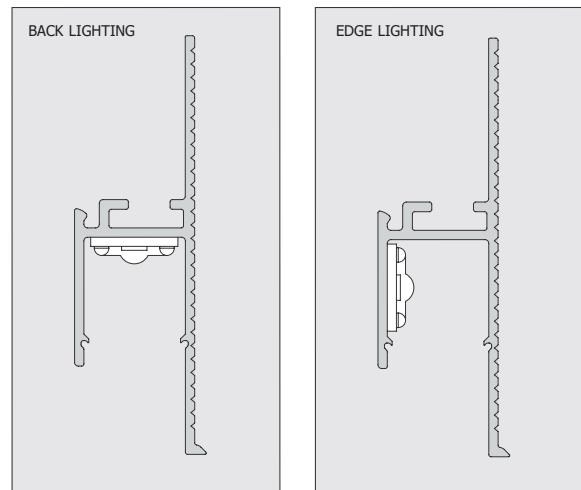

(844) 454-2910



solutions@optique-lighting.com



optique-lighting.com


# Perifina Wall Accent 2 in.

## Recessed Mud-In Wall Luminaire


OPTIQUE

**05.**

Affix the Wall Accent channel by gently snapping to curved channel.

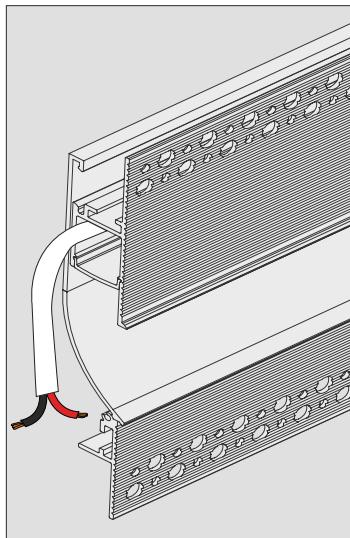


- a. Fasten the flat head screw through the countersunk hole.

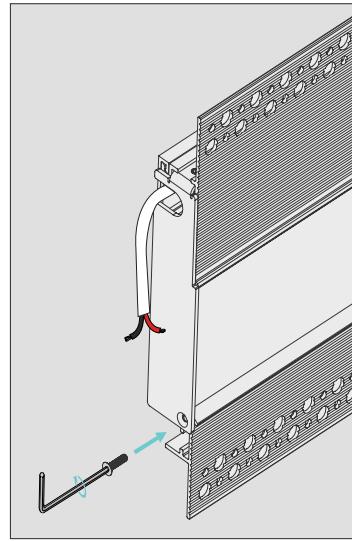


**06.**

Using allen key, fasten the Wall Accent end cap to the channel with provided screws.

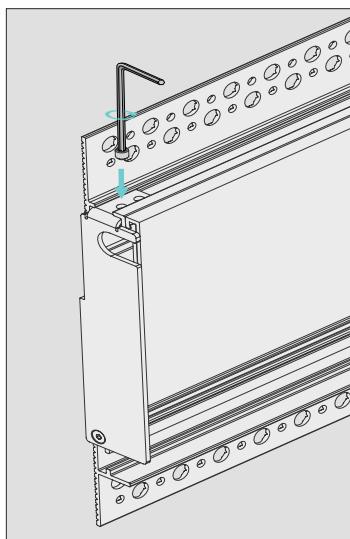

**07.**

Carefully countersink holes in Perifina Wall Accent 2 in. using the countersink drill bit.

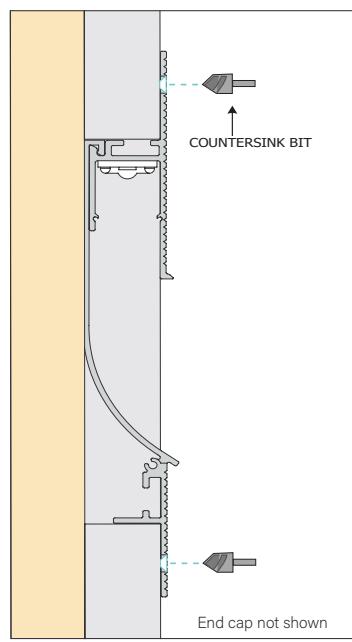


# Perifina Wall Accent 2 in.

Recessed Mud-In Wall Luminaire

OPTIQUE


**08.**

Connect tapelight lead to low-voltage in-wall rated wire. Red is positive (+) and black is negative (-).

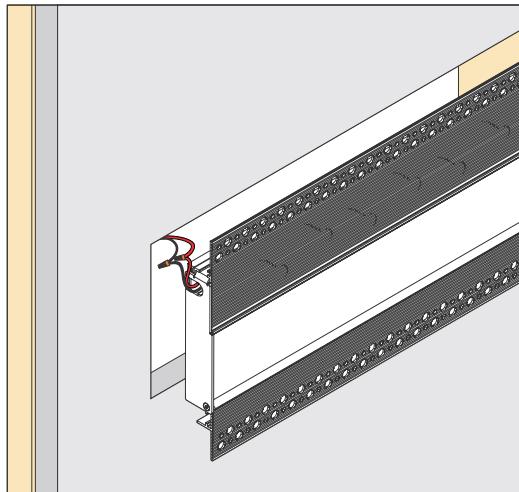


**10.**

Cover the inside of the fixture with painter's tape if necessary before plastering, to prevent joint compound and dust from entering.

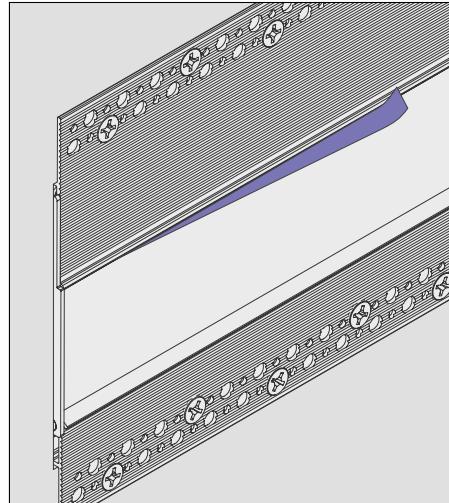


**09.**

Secure the fixture to the drywall using the drywall screws. The suggested screw spacing is 4 inches.

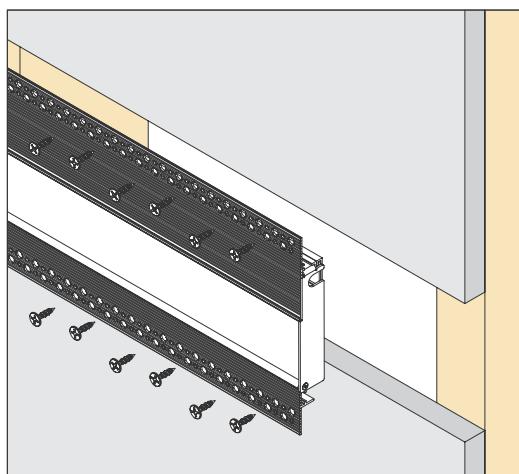

**11.**

Apply drywall tape along the edges of the fixture to prevent cracking of joint compound after installation.

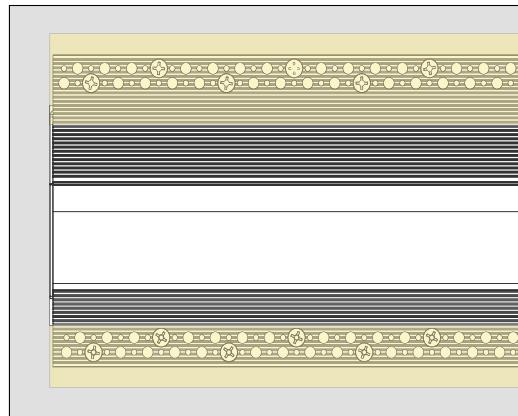

(844) 454-2910



solutions@optique-lighting.com



optique-lighting.com


# Perifina Wall Accent 2 in.

Recessed Mud-In Wall Luminaire

OPTIQUE


**12.**

Apply drywall joint compound over the fixture's flanges. Then finish the wall.

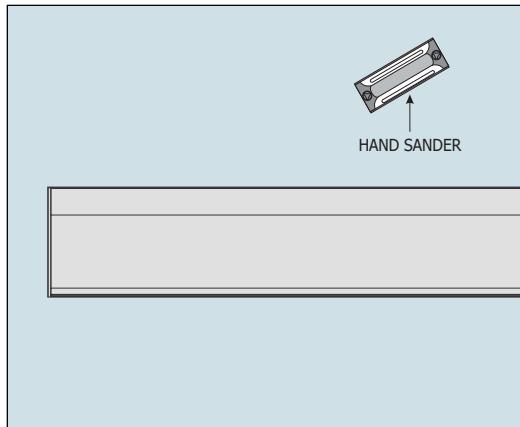

**13.**

Remove the painter's tape and clean if necessary.

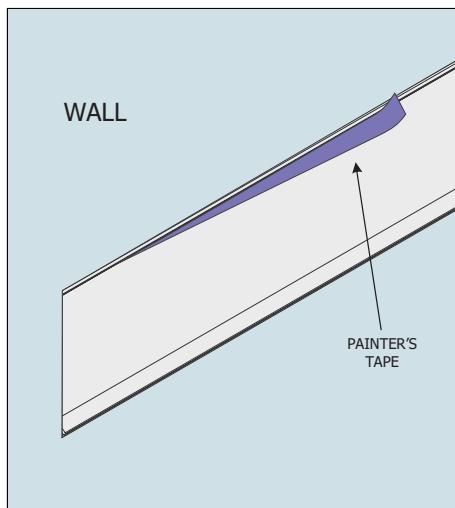

**14.**

Affix the lens by gently snapping into place. Ensure it is fully seated.

