


Perifina Wall Accent 3 & 4 in.

Recessed Mud-In Wall Luminaire

OPTIQUE

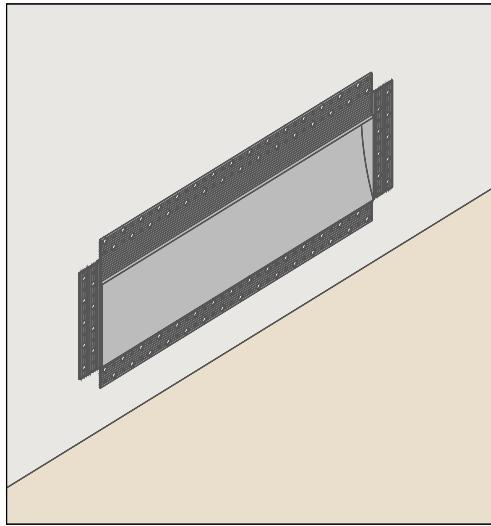


Beautifully crafted with a scoop design that creates an attractive light gradient that can easily go around corners without light gaps.



Required Tools




JAB
SAW



JOINT
KNIFE




COUNTERSINK
DRILL BIT

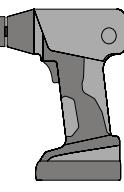

POWER DRILL



PAINTER'S
TAPE




TAPE MEASURE



HAND SANDER



Supplied Components

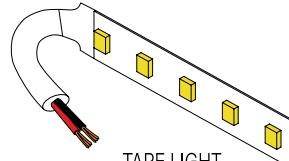

TAPE LIGHT
WITH LEAD WIRE



FLAT HEAD
SCREW

The following items may vary according to the configuration, and will be provided as applicable.



(844) 454-2910



solutions@optique-lighting.com



optique-lighting.com

Perifina Wall Accent 3 & 4 in.

Recessed Mud-In Wall Luminaire

OPTIQUE

Perifina Wall Accent Installation steps


01.

Position the 24V DC Class 2 power supply in a suitable location within 30 feet of the desired fixture location.

NOTE: Longer distances are acceptable when using a thicker 12 AWG wire.

02.

Bring 24V low-voltage in-wall rated wires to the desired fixture location.

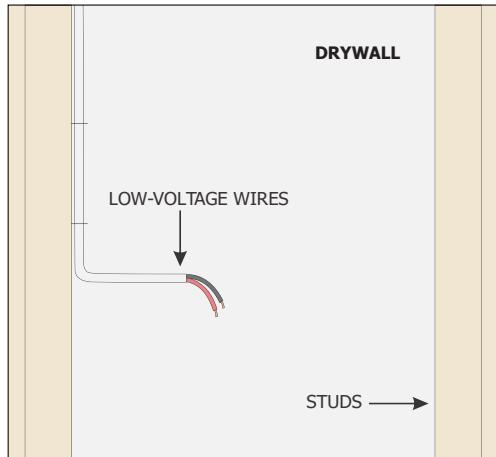


03.

Cut an opening in the drywall where you would like to mount Perifina Wall Accent based on measurements below.


Profile height varies between models.

Perifina Wall Accent 3 in: 3.5 in.

Perifina Wall Accent 4 in: 4.5 in.

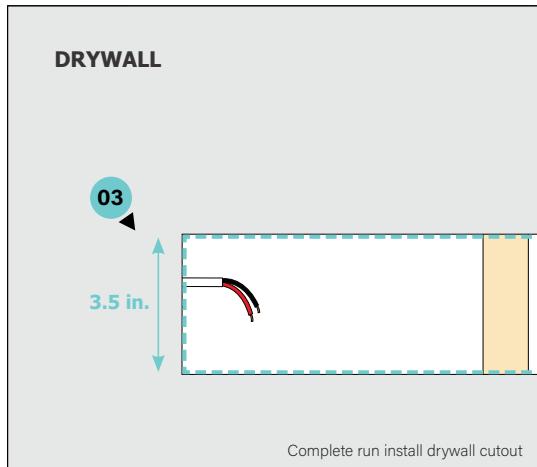

NOTE: Perifina Wall Accent 4 in. can only be used with 5/8" drywall.

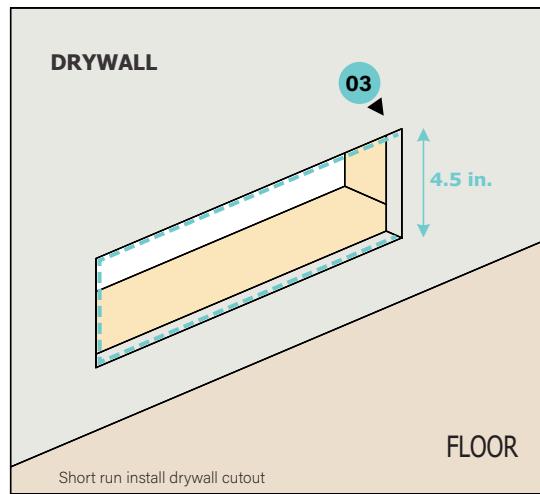


Perifina Wall Accent 3 & 4 in.

Recessed Mud-In Wall Luminaire

OPTIQUE


04.

Drill a 1/4 inch hole in the back of the fixture. This hole will be used for power feed. Deburr sharp edges.

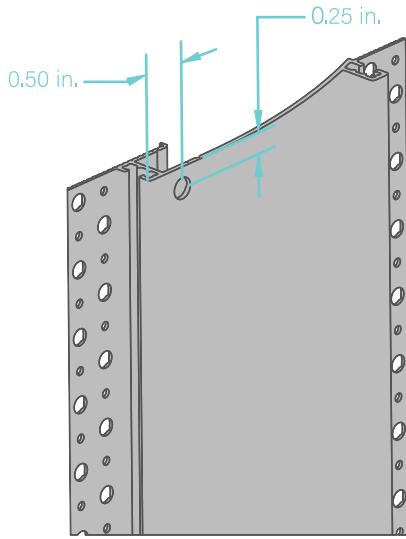


05.

Fasten the Perifina Accent end caps with the provided flat head screws on both ends.

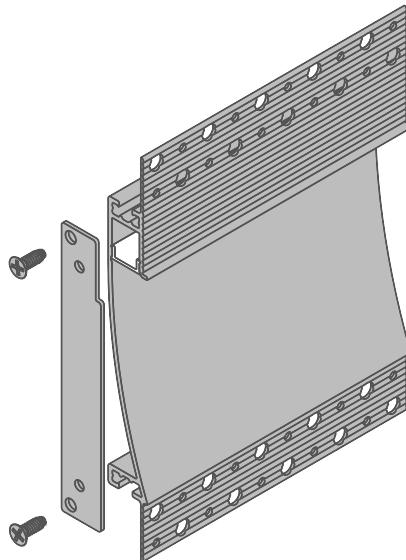


a. Assembly mudwing to the endcaps for short runs configurations.

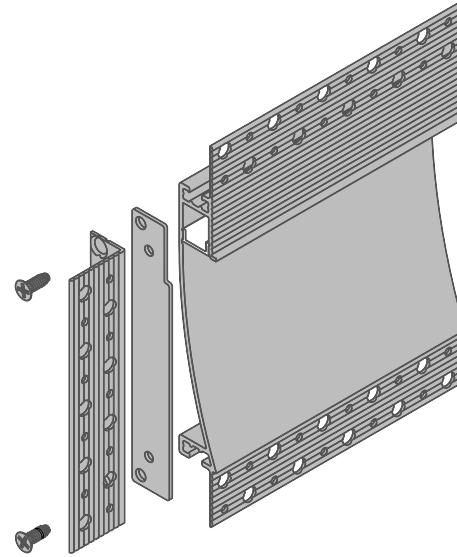

06.

Carefully countersink holes in Perifina Wall Accent using the countersink drill bit.

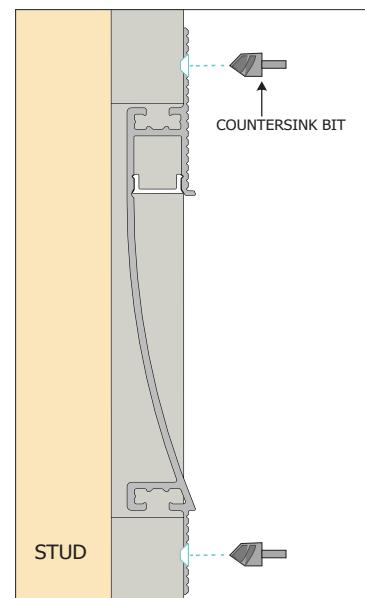


Perifina Wall Accent 3 & 4 in.

Recessed Mud-In Wall Luminaire


07.

Connect tapelight lead to low-voltage in-wall rated wire. Red is positive (+) and black is negative (-).

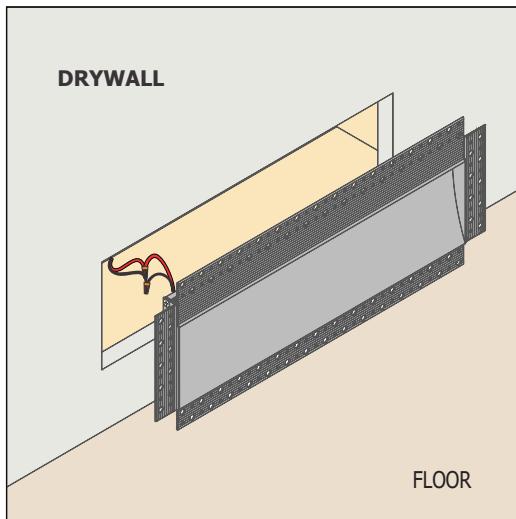


08.

Pass the connected low-voltage wires through the opening in the drywall cutout.

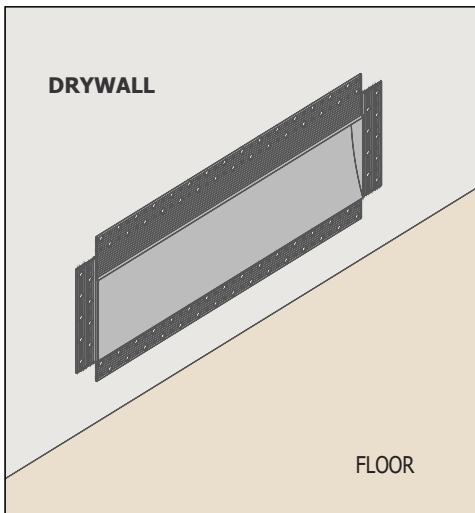


09.

Secure the fixture to the drywall using the drywall screws. The suggested screw spacing is 4 inches.

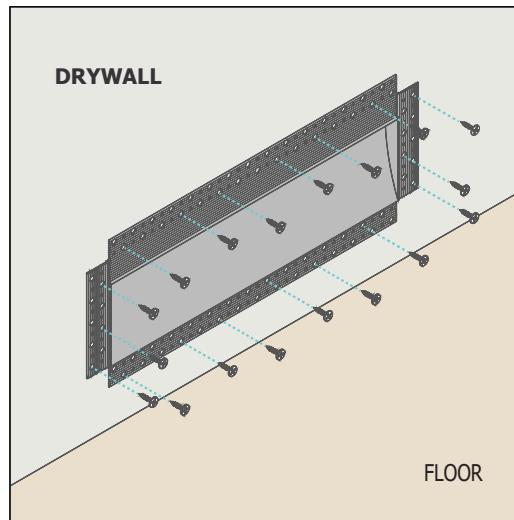

10.

Cover the inside of the fixture with painter's tape if necessary before plastering, to prevent joint compound and dust from entering.

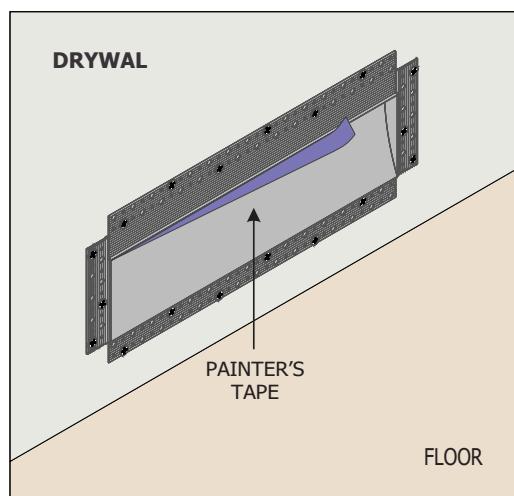

(844) 454-2910



solutions@optique-lighting.com




optique-lighting.com

Perifina Wall Accent 3 & 4 in.


Recessed Mud-In Wall Luminaire

11.


Apply drywall tape along the edges of the fixture to prevent cracking of joint compound after installation.

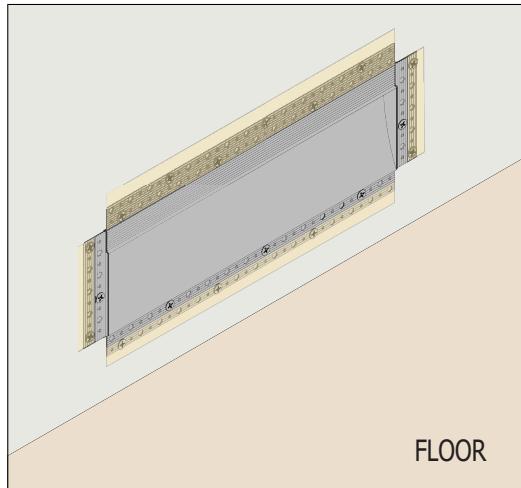**12.**


Apply drywall joint compound over the fixture's flanges. Then finish the wall.

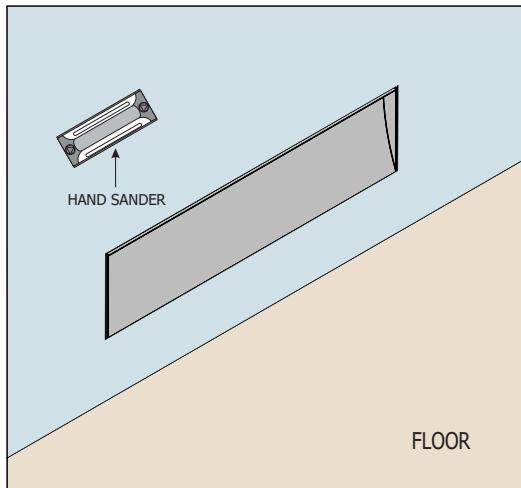**13.**

Remove the painter's tape and clean if necessary.

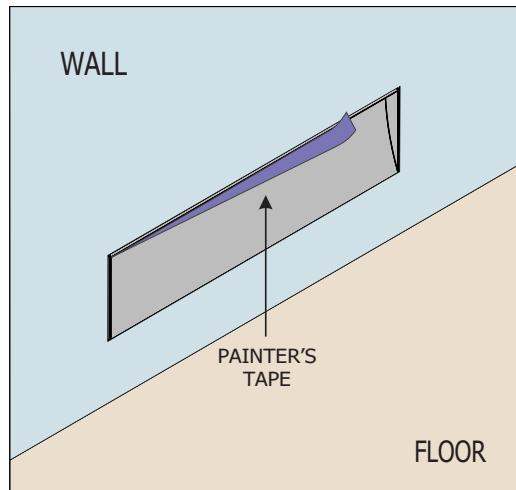**14.**

Affix the lens by gently snapping into place. Ensure it is fully seated.

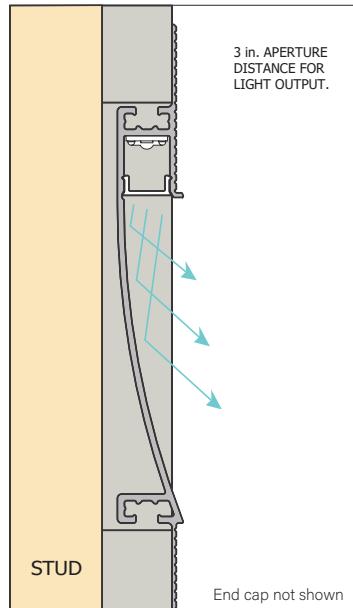

(844) 454-2910



solutions@optique-lighting.com



optique-lighting.com