


Perifina Wall Accent 2 in.

Recessed Mud-In Wall Luminaire

OPTIQUE

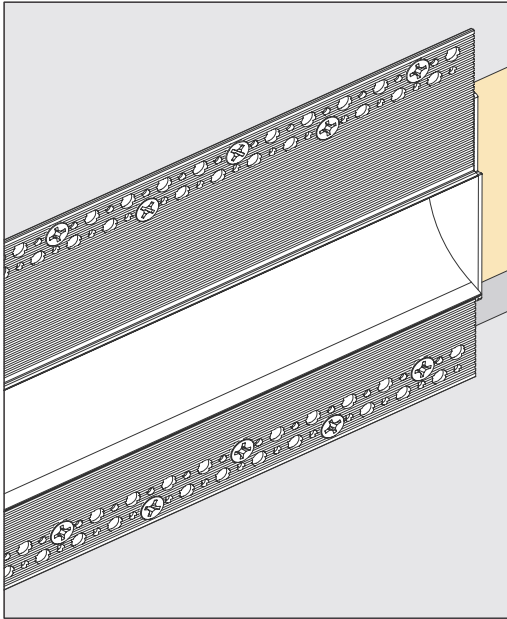


Beautifully crafted with a scoop design that creates an attractive light gradient that can easily go around corners without light gaps.


Important Information

1. Product compatible with 5/8 inch drywall. Ensure that the product you are using is compatible with your drywall thickness.
2. This product requires a 24V DC Class 2 power supply.
3. Use the larger screw hole to attach the LED channel to the drywall instead of the smaller screw holes.
4. Be careful not to over-tighten the screws; tighten them just enough to secure the channel without compressing it.
5. This product can span lengths that are wall-to-wall, or be specified in shorter sections for sconce-like applications.

Required Tools

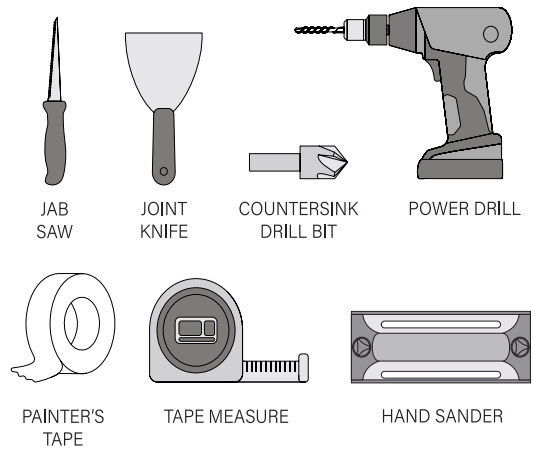

Supplied Components

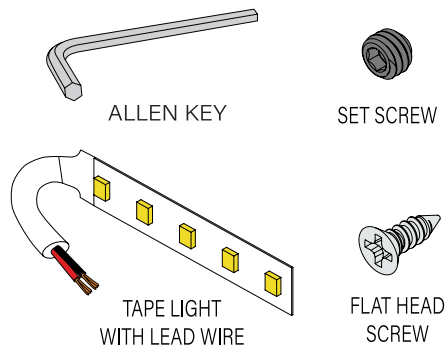

The following items may vary according to the configuration, and will be provided as applicable.

Perifina Wall Accent 2 in.

Recessed Mud-In Wall Luminaire

Perifina Wall Accent Installation steps


01.

Position the 24V DC Class 2 power supply in a suitable location within 30 feet of the desired fixture location.

NOTE: Longer distances are acceptable when using a thicker 12 AWG wire.

02.


Bring 24V low-voltage in-wall rated wires to the desired fixture location.

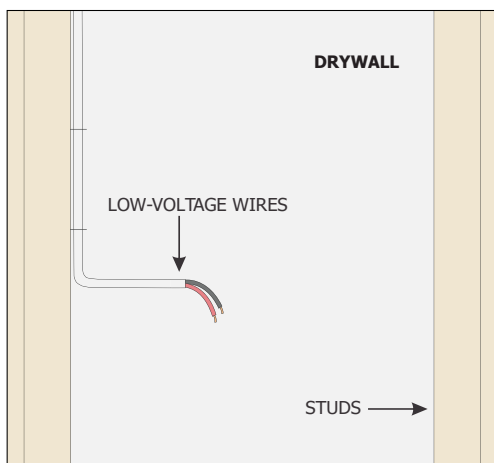

03.

Cut a 3.5 in. opening in the drywall where you would like to mount Perifina Wall Accent 2 in.



NOTE: Mark the location of the studs on the drywall for future reference.

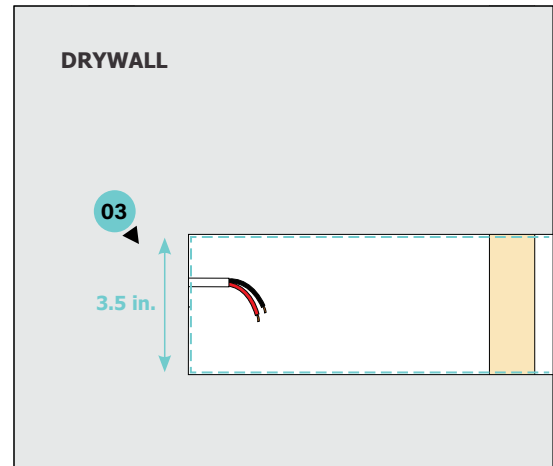

04.

Remove the adhesive backing from the tape light and stick the tape to the inside edges of the fixture.

NOTE: For an installation with bevel corners place the tapelight as the edge lighting option.

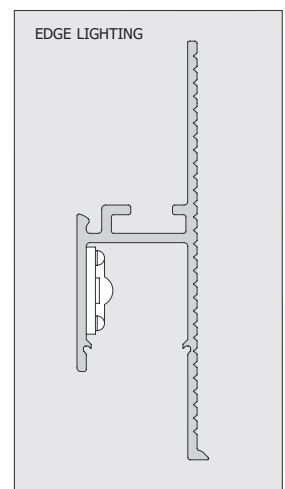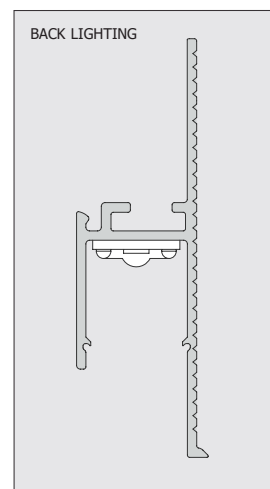


Perifina Wall Accent 2 in.

Recessed Mud-In Wall Luminaire

OPTIQUE


05.

Affix the Wall Accent channel by gently snapping to curved channel.

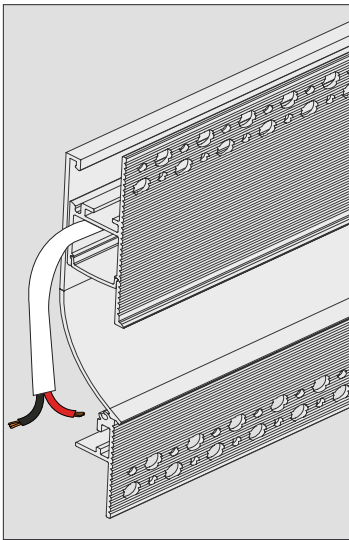


06.

Using allen key, fasten the Wall Accent end cap to the channel with provided screws.

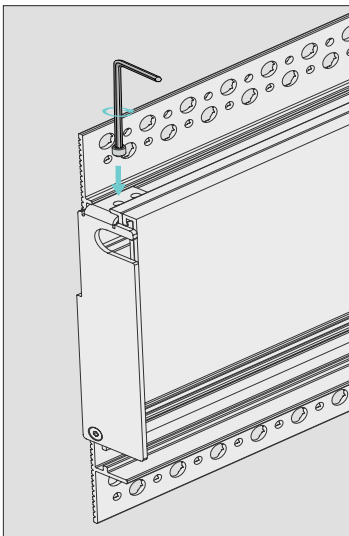


- a. Fasten the flat head screw through the countersunk hole.

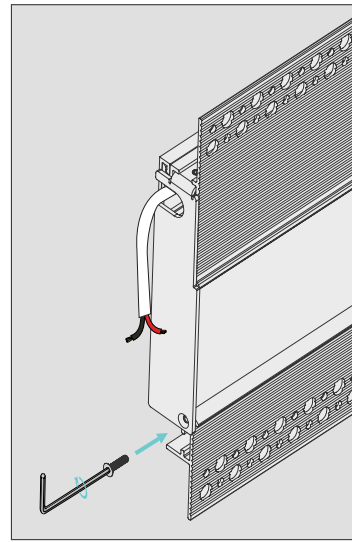

07.

Carefully countersink holes in Perifina Wall Accent 2 in. using the countersink drill bit.

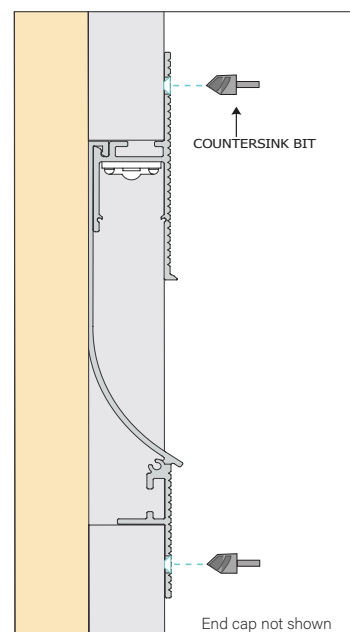


Perifina Wall Accent 2 in.

Recessed Mud-In Wall Luminaire


08.

Connect tapelight lead to low-voltage in-wall rated wire. Red is positive (+) and black is negative (-).

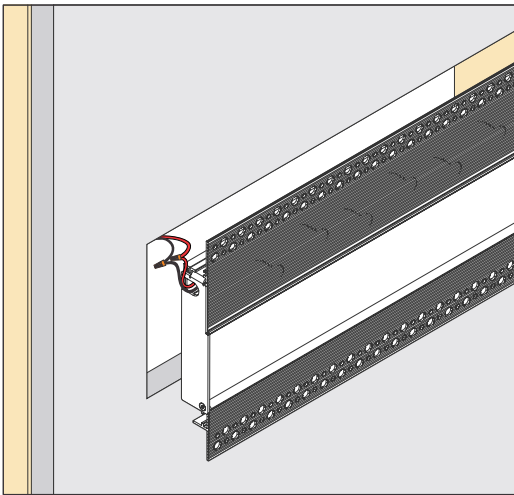


09.

Secure the fixture to the drywall using the drywall screws. The suggested screw spacing is 4 inches.

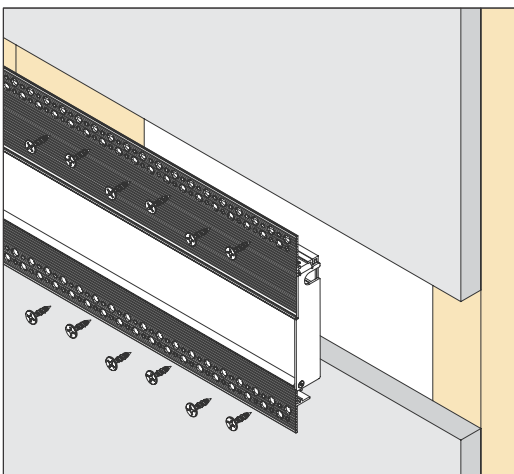


10.

Cover the inside of the fixture with painter's tape if necessary before plastering, to prevent joint compound and dust from entering.

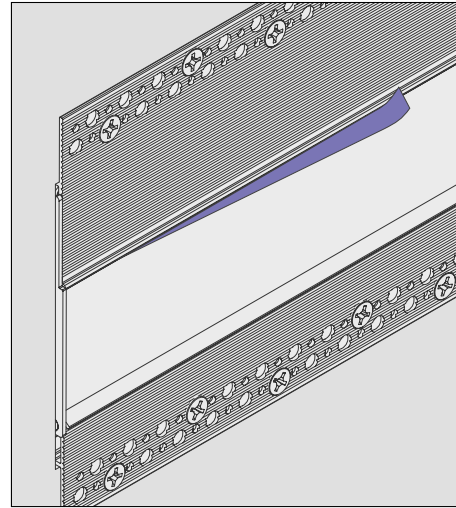

11.

Apply drywall tape along the edges of the fixture to prevent cracking of joint compound after installation.

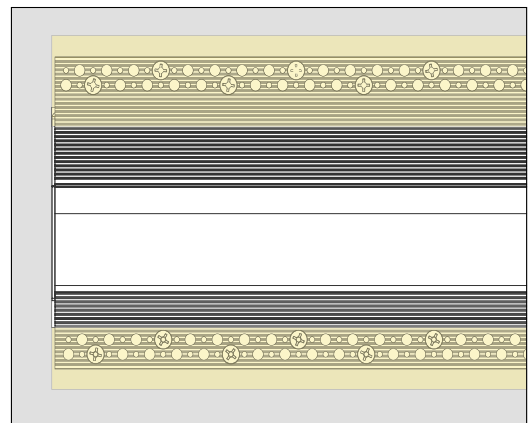


Perifina Wall Accent 2 in.

Recessed Mud-In Wall Luminaire


12.

Apply drywall joint compound over the fixture's flanges. Then finish the wall.

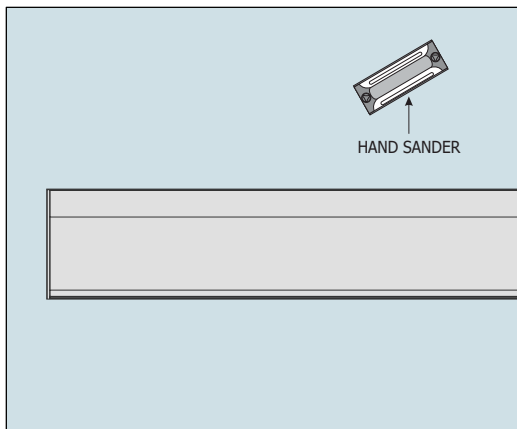

13.

Remove the painter's tape and clean if necessary.

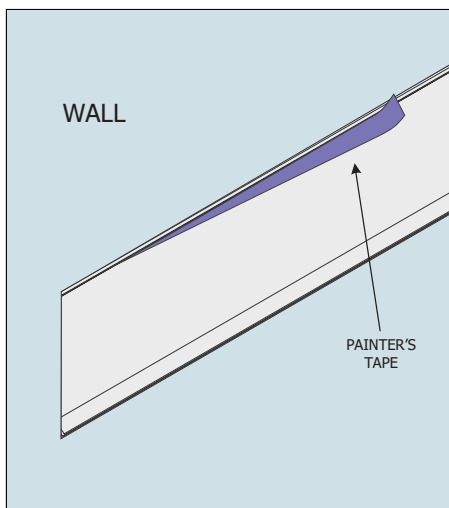

14.

Affix the lens by gently snapping into place. Ensure it is fully seated.

