


Perifina Wall Flood 2 in.

Recessed Mud-In Ceiling Cove Luminaire


OPTIQUE

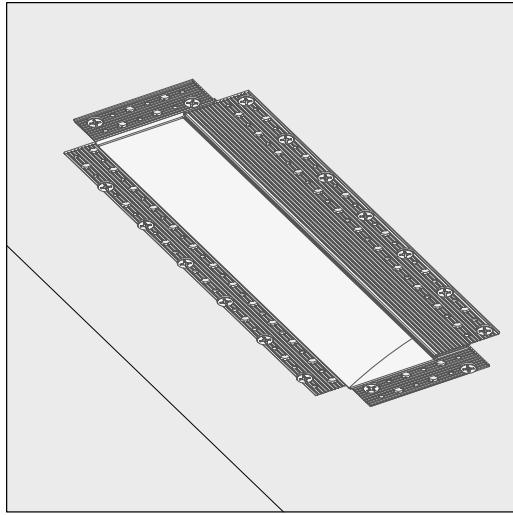


Soft indirect light designed to flood a wall with light.



Required Tools

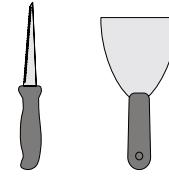

JAB SAW



JOINT KNIFE




COUNTERSINK DRILL BIT



POWER DRILL



PAINTER'S TAPE




TAPE MEASURE



HAND SANDER



Supplied Components

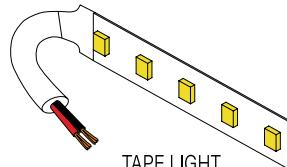

TAPE LIGHT
WITH LEAD WIRE



FLAT HEAD SCREW

The following items may vary according to the configuration, and will be provided as applicable.



(844) 454-2910



solutions@optique-lighting.com



optique-lighting.com

Perifina Wall Flood 2 in.

Recessed Mud-In Ceiling Cove Luminaire

OPTIQUE

Perifina Wall Flood Installation steps


01.

Position the 24V DC Class 2 power supply in a suitable location within 30 feet of the desired fixture location.

NOTE: Longer distances are acceptable when using a thicker 12 AWG wire.


02.

Cut a 2.75 in. opening where you would like to mount the fixture. Recommended distance is 12 in. - 18 in. from the wall to be washed.

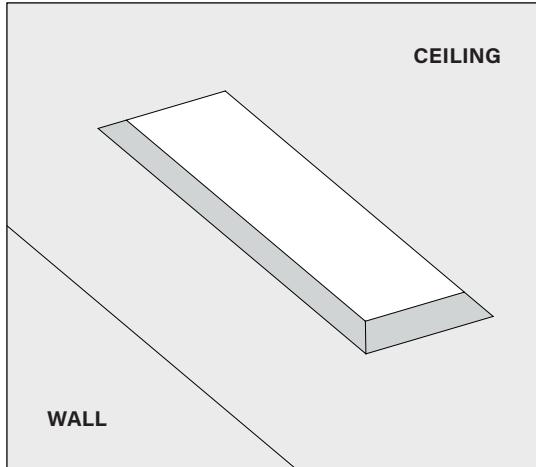


03.

Bring power to a point through the drywall that will match the position of the fixture's cable conduit.

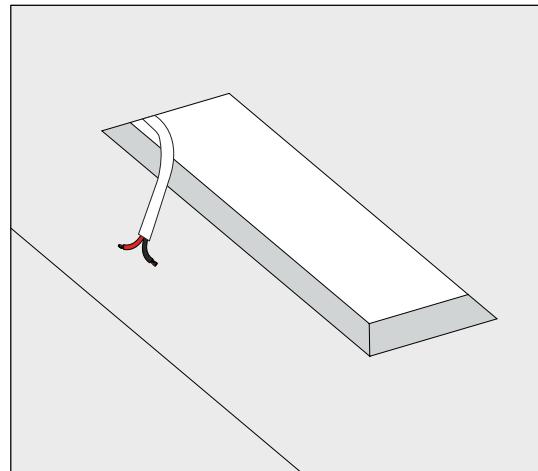

04.

Drill a 1/4 in. hole through the back of the fixture, this will be used for the power feed. Deburr any sharp edges.

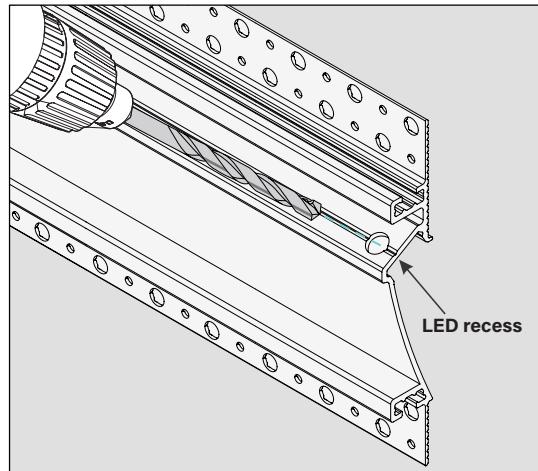

(844) 454-2910



solutions@optique-lighting.com



optique-lighting.com


Perifina Wall Flood 2 in.

Recessed Mud-In Ceiling Cove Luminaire

OPTIQUE


05.

Assemble each end cap at the ends of the fixture with two flat head screws provided. Assemble the mud-in end cap for short run configurations.

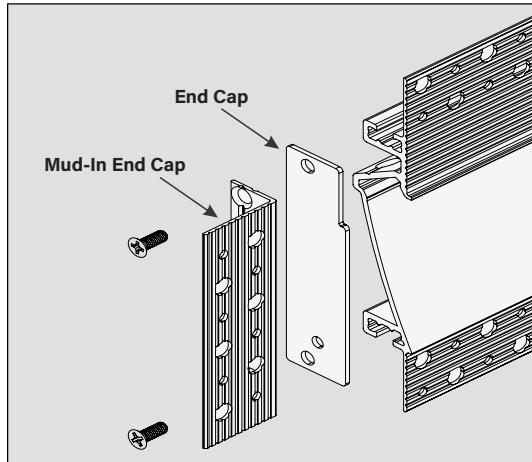


06.

Carefully countersink the holes in the mud-in flanges where the drywall screws will be placed.

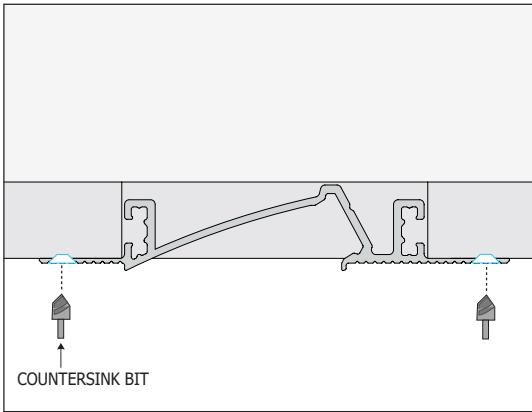


07.

Pass the low-voltage power wires from the LED tape through the hole. Connect LED tape lead to low-voltage in-wall rated wire. Red is positive (+) and black is negative (-).

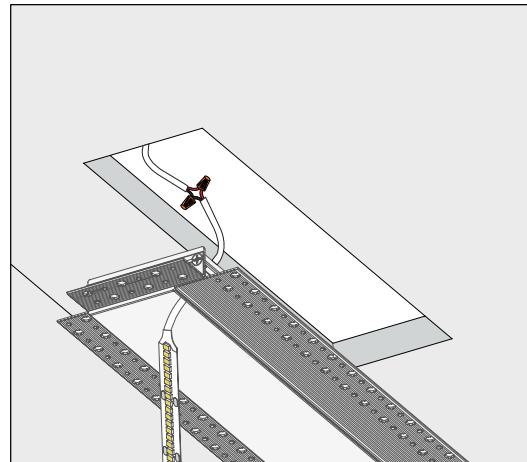

08.

Secure the fixture to the drywall using drywall screws at the countersink points. Recommended screw spacing is every 4 in.

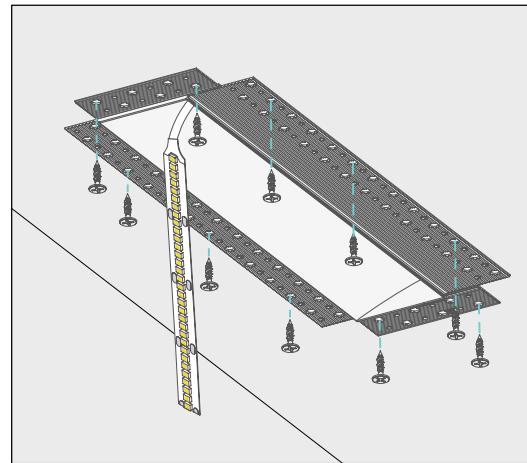


Perifina Wall Flood 2 in.

Recessed Mud-In Ceiling Cove Luminaire


09.

Remove the adhesive backing from the back of the LED tape. Apply the tape light to the inside and pass the lead wire to the back.

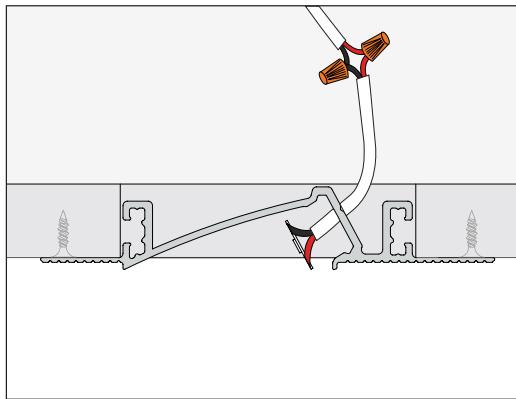


11.

Apply drywall tape along the edges of the fixture to prevent the joint compound from cracking after installation, and smooth the tape flush.

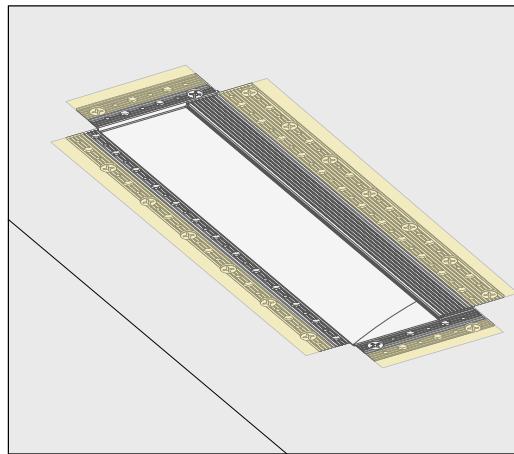


10.

Install the LED diffuser. Then cover the lens with painter's tape if necessary, to prevent joint compound and dust from entering.

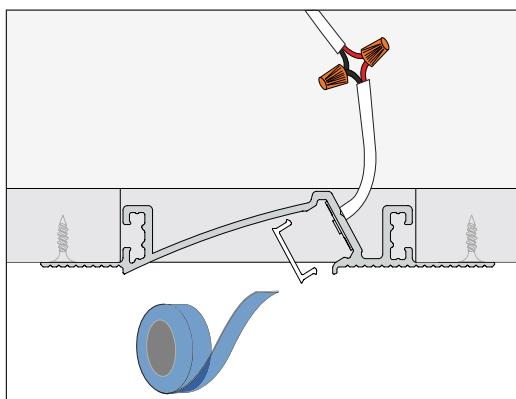

12.

Apply joint compound mud to the mud-in flanges with a joint knife, covering the flanges and screw heads, and smooth the mud joint.

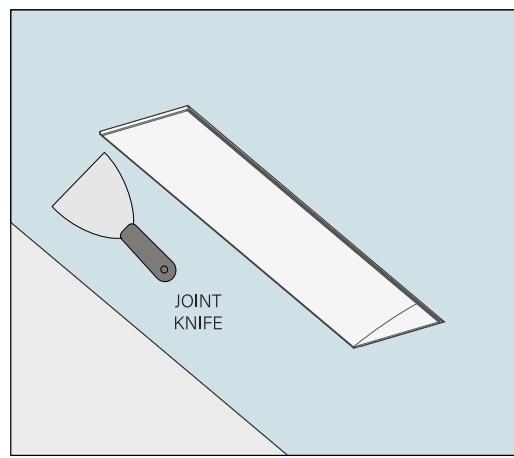


Perifina Wall Flood 2 in.

Recessed Mud-In Ceiling Cove Luminaire

13.

Once dry, use the hand sander to smooth the mud to make a seamless look with the drywall. Then remove the painter's tape.

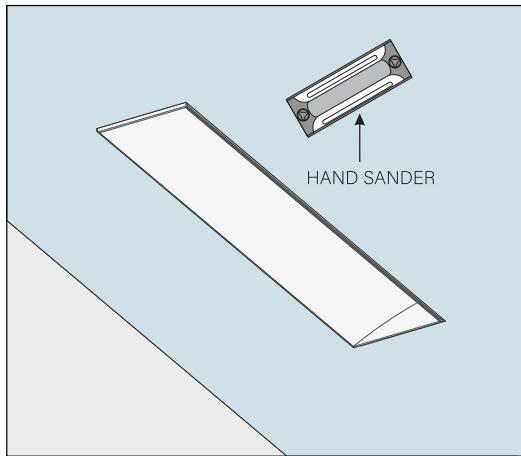

14.

Paint or finish the wall as desired. Turn on lights.

