


Rozino Wall Grazer

Canopy 500 Installation Instruction


OPTIQUE

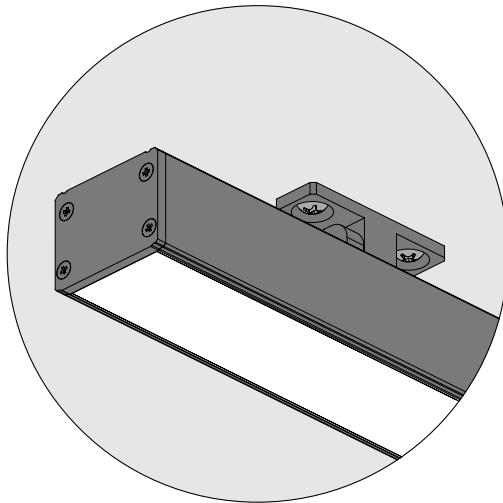


Important Information

1. This product requires a 24V DC Class 2 power supply.
2. This product is intended to be mounted on the ceiling.
3. There are two ways to power the fixture as follows:
 - Option A: Side Power Install
 - Option B: Top Power Install
4. Optique recommends drilling fixture supports into joists in the ceiling. If joists aren't available, please use supplied drywall anchors. (The following instructions depict the installation using drywall anchors.)

Required Tools

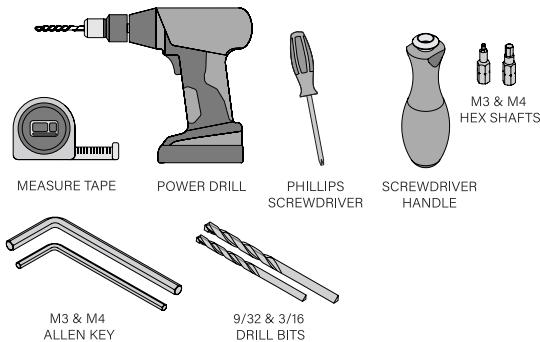

Supplied Components

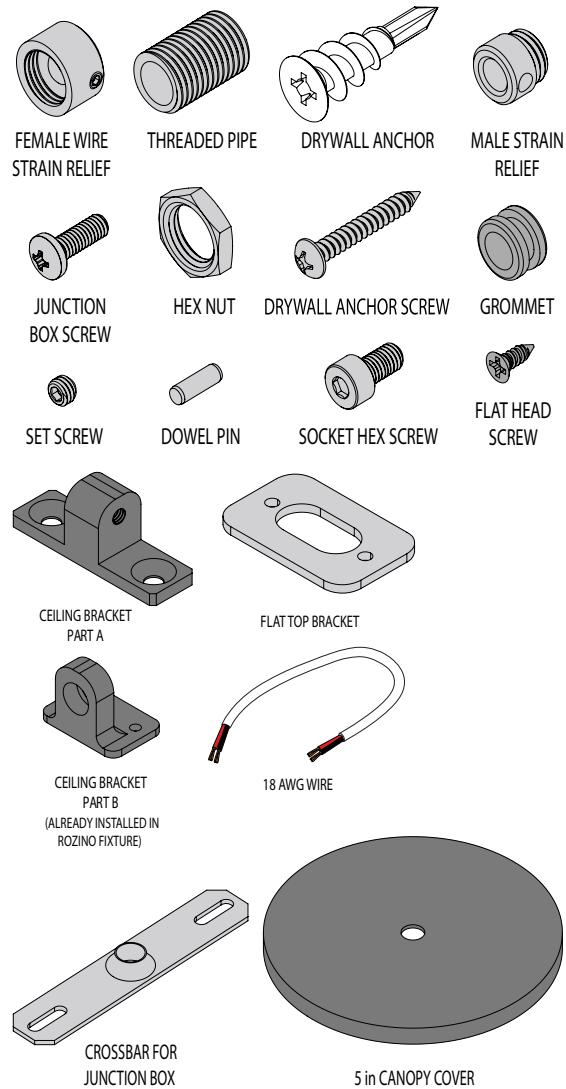

Rozino Wall Grazer

Canopy 500 Installation Instruction

OPTIQUE

Option A: Side Power Install Section One.


1.1.A

Position the 24V DC Class 2 power supply in a suitable location within 30 feet of the desired fixture location.

NOTE: Longer distances are acceptable when using thicker 12 AWG wire.


1.2.A

With a pencil, mark a line where you would mount the Rozino. Minimum recommended distance 2.5 - 2.6 in. from the wall to be grazed.

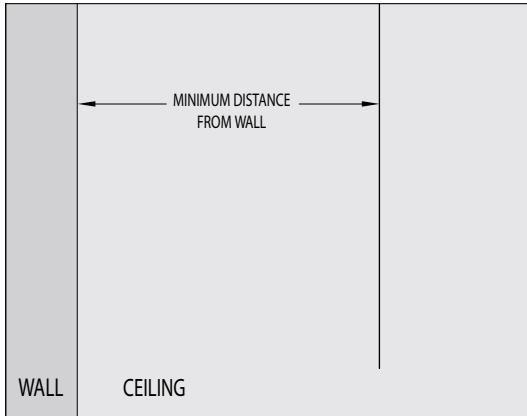


1.3.A

Mark the location for a 4 x 4 inch ceiling junction box where the fixture will be powered by the 24V DC Class 2 driver.

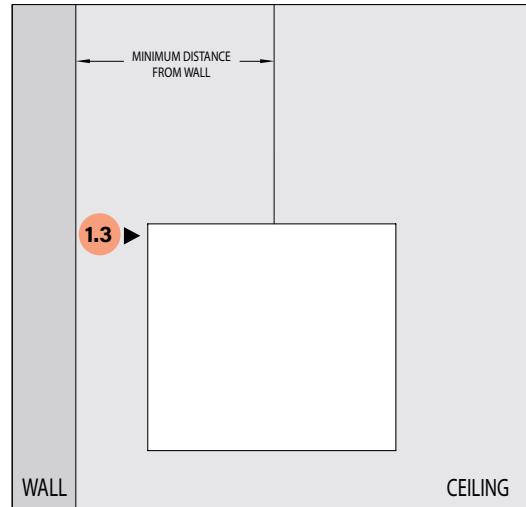

1.4.A

Place the junction box into previous hole and secure it. Bring a 24V low-voltage wire to the junction box.

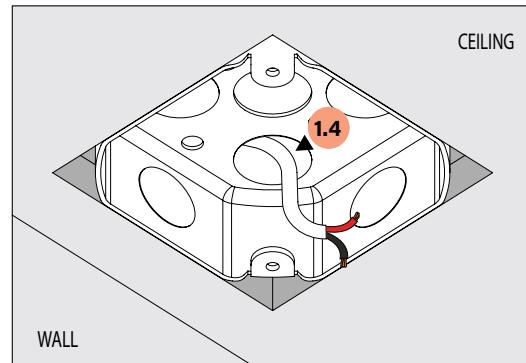

Rozino Wall Grazer


Canopy 500 Installation Instruction

OPTIQUE

Option A: Side Power Install Section Two


2.1.A

Place the ceiling bracket over marked line at 1.5 in. to 2 in. from the junction box. Make another mark with pencil in the center holes.

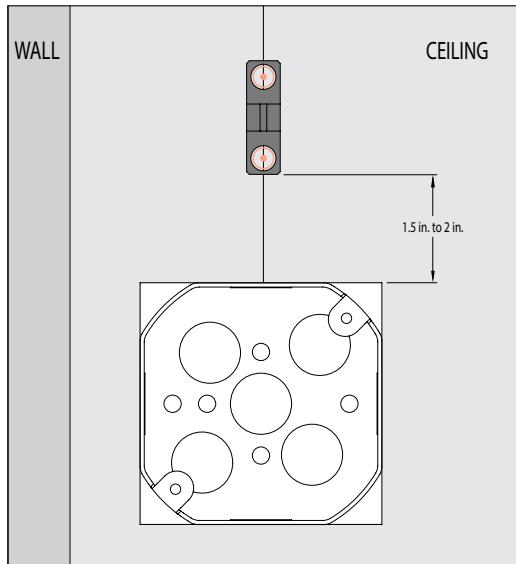

2.2.A


Drill a hole with a 3/16 in. drill bit at the marked spots. Tap the drywall anchors in the hole until it is flush with the ceiling using a hammer.

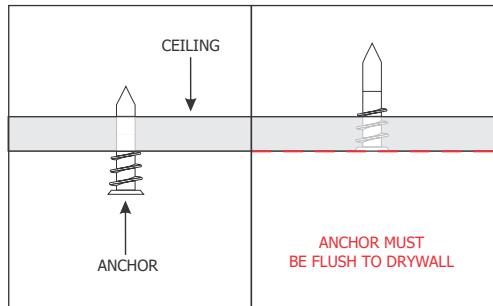

2.3.A


Align the holes in the ceiling bracket with the installed anchors. Use a screwdriver or drill to drive the screws until it is tight.

NOTE: Use one ceiling bracket for every two feet.

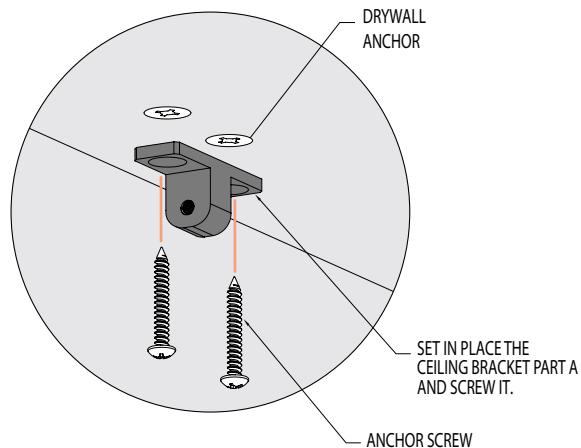

2.4.A

Align the brackets that come with the Rozino fixture to the distances of the ceiling brackets previously installed.

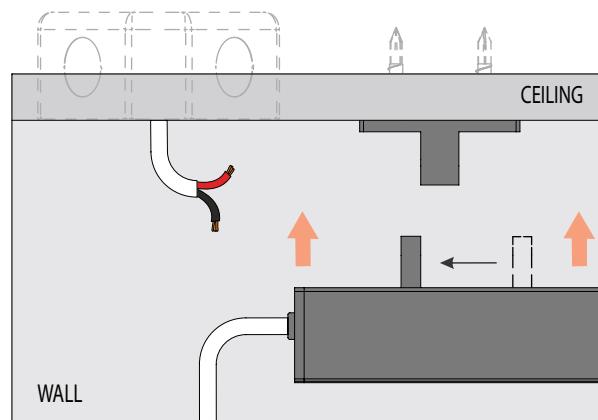


Rozino Wall Grazer

Canopy 500 Installation Instruction

OPTIQUE

2.5.A


Tighten the set screws of the brackets on the Rozino clockwise to hold in place.

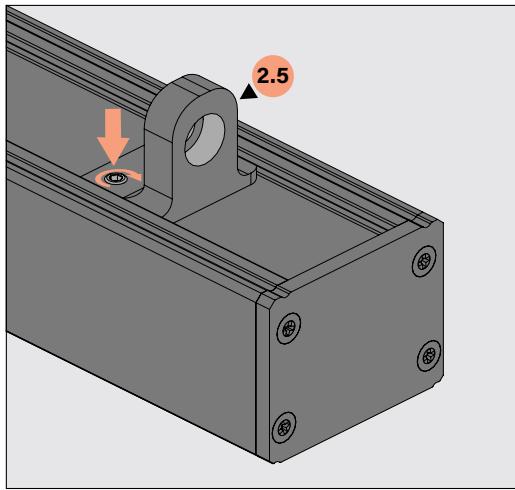

NOTE: Use one ceiling bracket for every two feet.

2.6.A


Align Rozino with the ceiling brackets. Screw the socket hex screw to secure the fixture to the ceiling brackets.

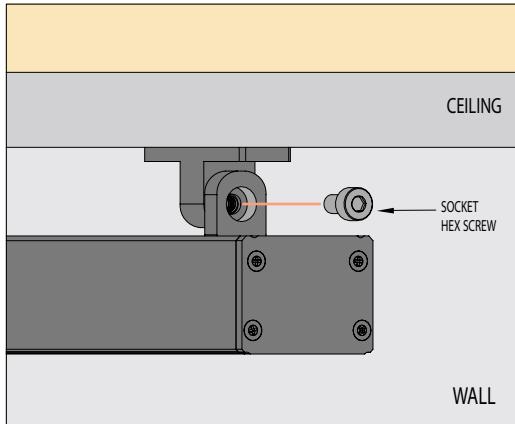

Option A: Side Power Install Section Three


3.1.A

Drive the threaded pipe in the crossbar and secure it with the hex nut.

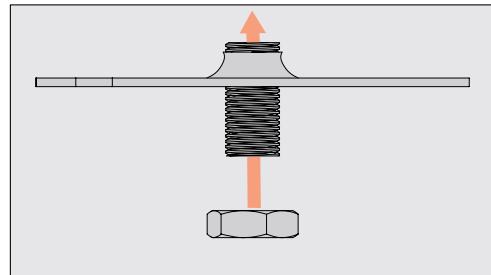

3.2.A

Pre-thread the wire from the Rozino through the female strain relief, canopy cover, and through the previous assembled crossbar.

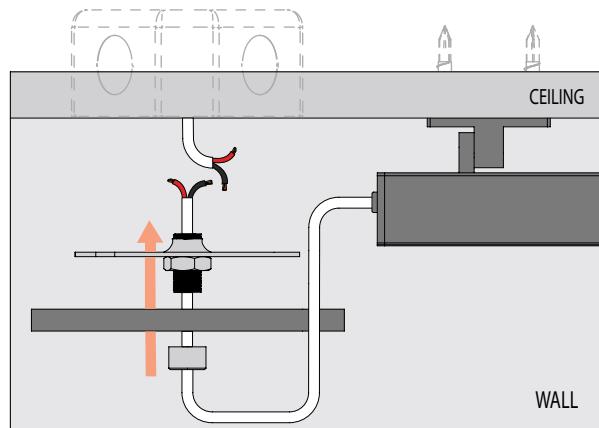

(844) 454-2910



solutions@optique-lighting.com



optique-lighting.com

Rozino Wall Grazer

Canopy 500 Installation Instruction

OPTIQUE


3.3.A

Connect the 24V low-voltage wire to the wire lead from the Rozino. Red is positive (+) and black is negative (-).

- Place connected low-voltage wires into the junction box in the ceiling.



3.4.A

Align the holes in the crossbar with the junction box corners. Use a screwdriver or drill to drive the screws until it is tight.

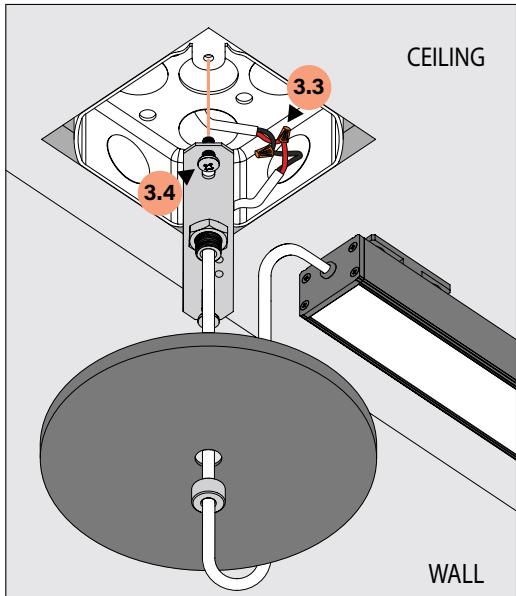


3.5.A

Secure the 5 in. canopy cover by fastening the female strain relief to the threaded rod.

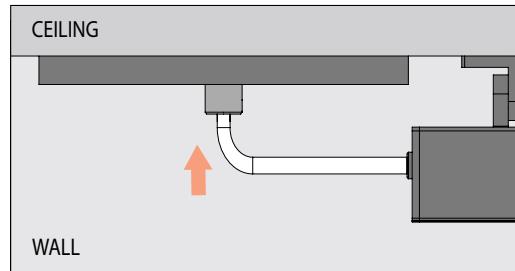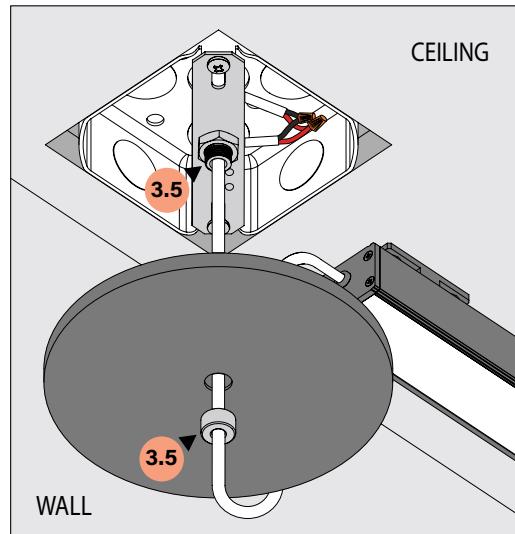

3.6.A

Route the wire through the canopy and tighten the set screw in the strain relief clockwise.

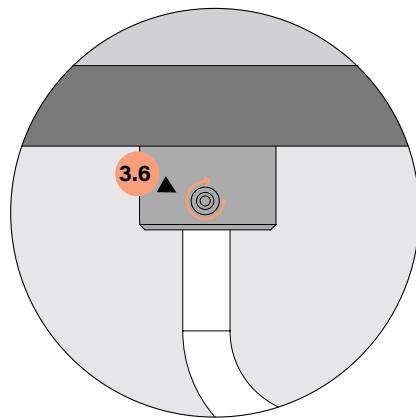



Rozino Wall Grazer

Canopy 500 Installation Instruction

OPTIQUE

3.7.A


Affix fixture cover to Rozino by gently snapping into place.

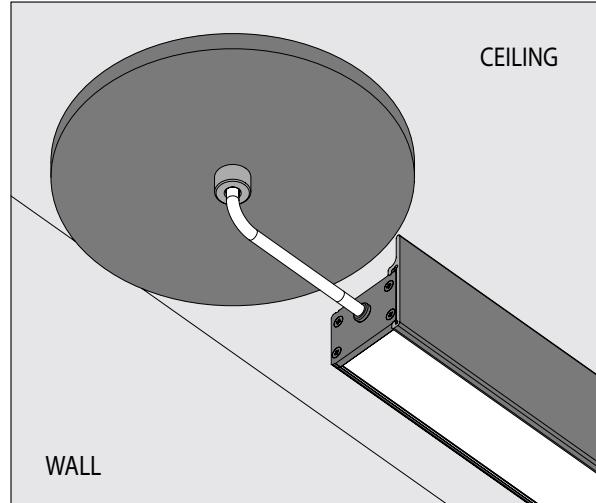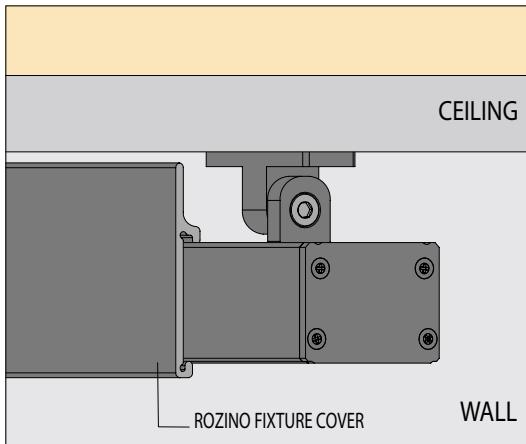

3.8.A

Tilt Rozino to desired angle and tighten the socket hex screw.

NOTE: Recommendable tilt between 2 - 5 degrees.

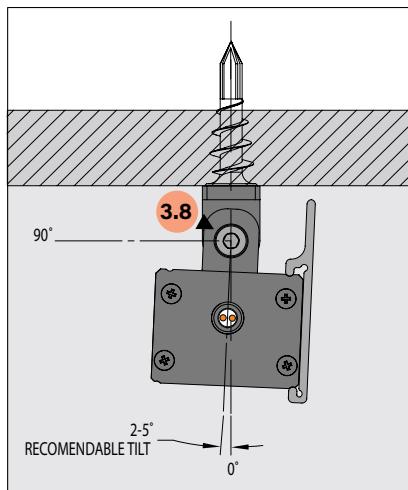

(844) 454-2910



solutions@optique-lighting.com



optique-lighting.com

Rozino Wall Grazer

Canopy 500 Installation Instruction

OPTIQUE

Option B: Top Power Install Section One.


1.1.B

Position the 24V DC Class 2 power supply in a suitable location within 30 feet of the desired fixture location.

NOTE: Longer distances are acceptable when using thicker 12 AWG wire.


1.2.B

With a pencil, mark a line where you would mount the Rozino. Minimum recommended distance 2.5 - 2.6 in. from the wall to be grazed.

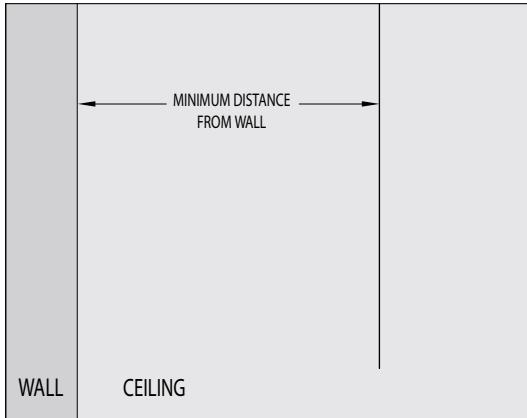


1.3.B

Mark the location for a 4 x 4 inch ceiling junction box where the fixture will be powered by the 24V DC Class 2 driver.

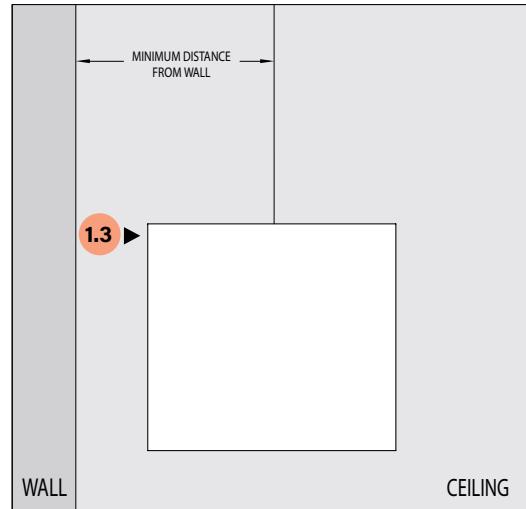

1.4.B

Place the junction box into previous hole and secure it. Bring a 24V low-voltage wire to the junction box.

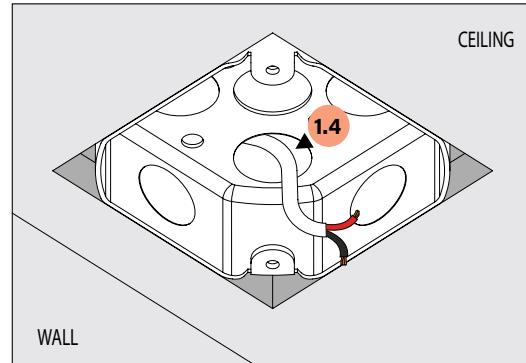

Rozino Wall Grazer


Canopy 500 Installation Instruction

OPTIQUE

Option B: Top Power Install Section Two


2.1.B

Place the ceiling bracket over marked line at 1.5 in. to 2 in. from the junction box. Make another mark with pencil in the center holes.

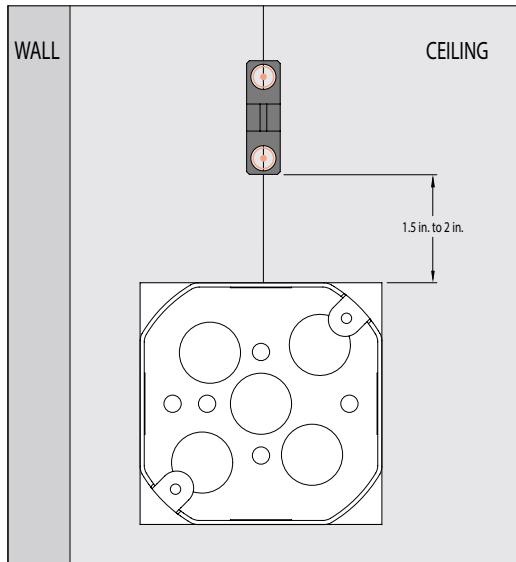

2.2.B


Drill a hole with a 3/16 in. drill bit at the marked spots. Tap the drywall anchors in the hole until it is flush with the ceiling using a hammer.

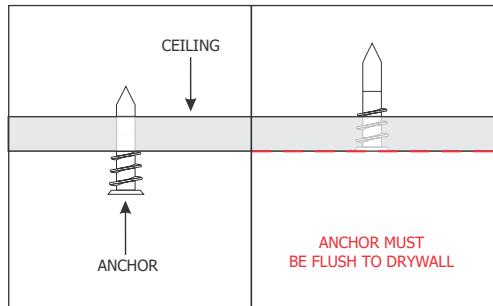

2.3.B


Align the holes in the ceiling bracket with the installed anchors. Use a screwdriver or drill to drive the screws until it is tight.

NOTE: Use one ceiling bracket for every two feet.

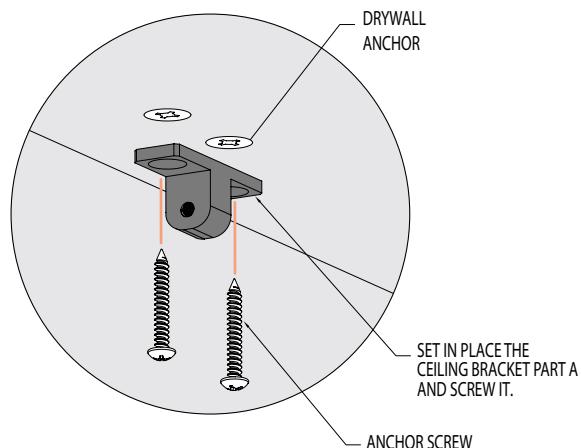

2.4.B

Align the brackets that come with the Rozino fixture to the distances of the ceiling brackets previously installed.

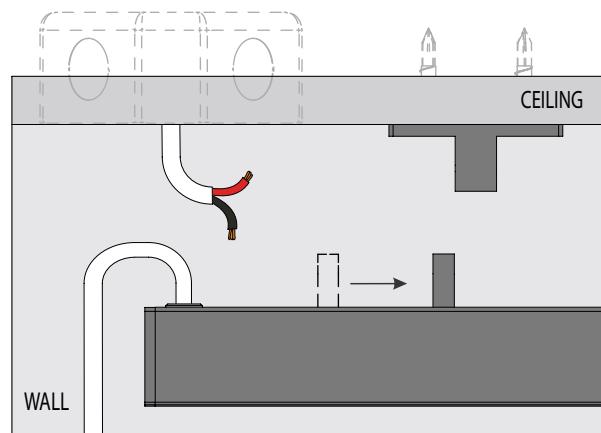


Rozino Wall Grazer

Canopy 500 Installation Instruction

OPTIQUE

2.5.B

Tighten the set screws of the brackets on the Rozino clockwise to hold in place.

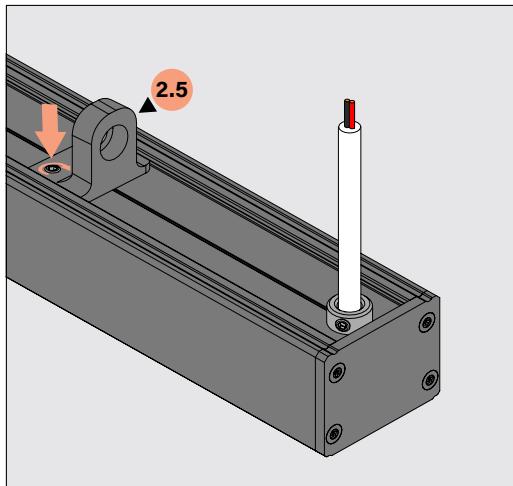


NOTE: Use one ceiling bracket for every two feet.



Option B: Top Power Install Section Three


3.1.B

Drive the threaded pipe in the crossbar and secure it with the hex nut.

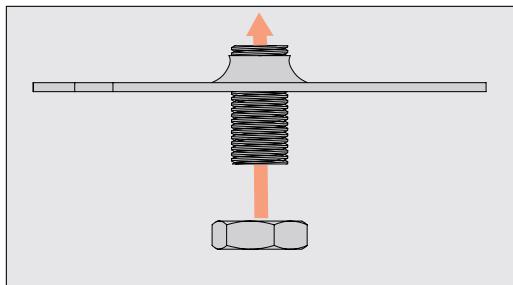

3.2.B

Pre-thread the wire from the Rozino through the female strain relief, canopy cover, and through the previous assembled crossbar.

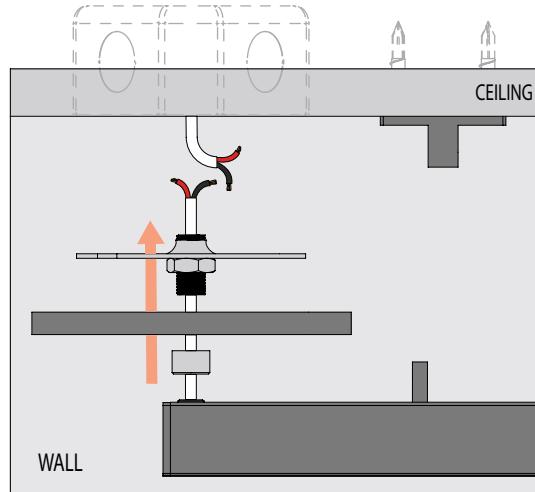

3.3.B

Connect the 24V low-voltage wire to the wire lead from the Rozino. Red is positive (+) and black is negative (-).

- Place connected low-voltage wires into the junction box in the ceiling.

3.4.B

Align the holes in the crossbar with the junction box corners. Use a screwdriver or drill to drive the screws until it is tight.



(844) 454-2910



solutions@optique-lighting.com




optique-lighting.com

Rozino Wall Grazer


Canopy 500 Installation Instruction

OPTIQUE

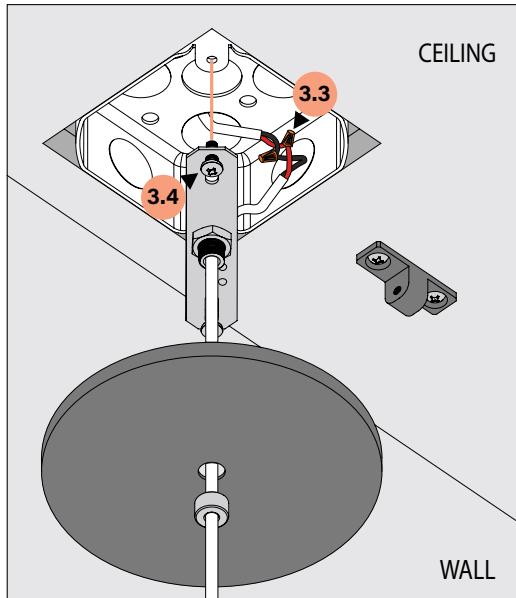



3.5.B

Secure the 5 in. canopy cover by fastening the female strain relief to the threaded rod.

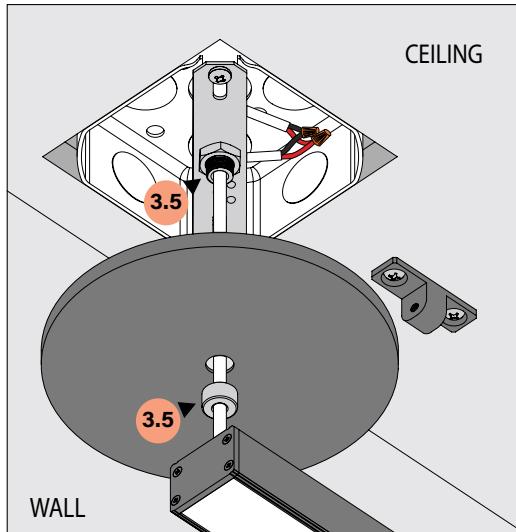

3.6.B

Route the wire through the canopy and tighten the set screw in the strain relief clockwise.

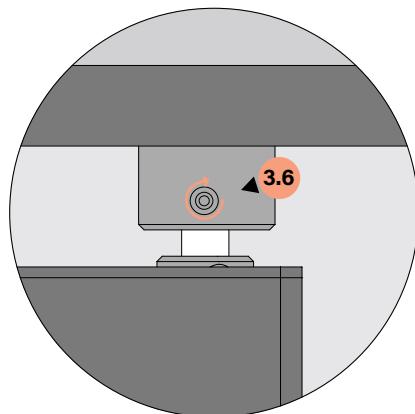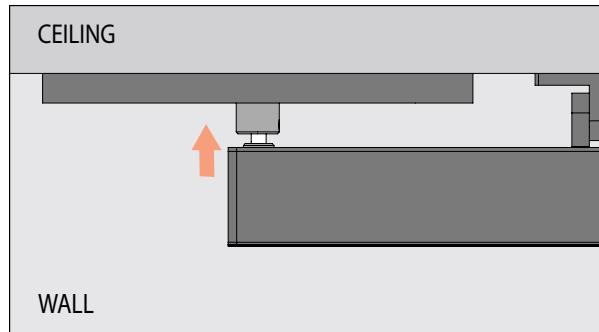


3.7.B

Align Rozino with the ceiling brackets. Screw the socket hex screw to secure the fixture to the ceiling brackets.


Rozino Wall Grazer

Canopy 500 Installation Instruction

OPTIQUE

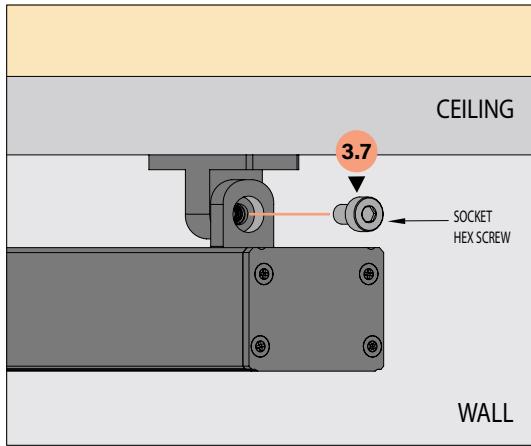

NOTE: Paintable fixture cover is not compatible with a top power installation.

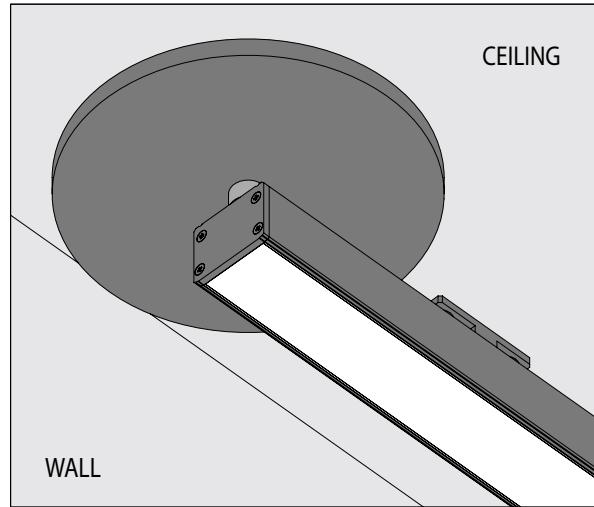

3.8.B

Tilt Rozino to desired angle and tighten the socket hex screw.

NOTE: Recommendable tilt between 2 - 5 degrees.

